


bed comes packaged with the headboard in the lower position. To adjust the height, use the Allen wrench to unscrew all the bolts at the back of each headboard panel. By rotating the panels 180 degrees you will add and extra 4" of height to the headboard (*Figure 7*). To reattach, begin but do not fully tighten all bolts in each of the two panels. After all bolts have been started, use the Allen wrench to fully tighten all locations.

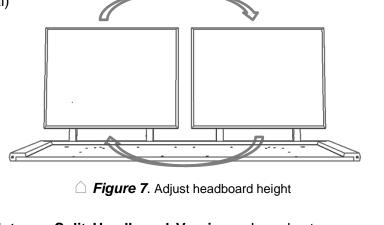


**Note on Split Headboard Version** – In order to preserve the continuity of the wood grain across the two panels, be sure to rotate them as if they were a single panel as in the diagram. Tools required Allen wrench

**Note:** On occasion customers have let us know that their Astrid bed is noisy. We have found that the following steps should address this issue.

1. Verify that the bed is correctly assembled. Please check that all fasteners are in place per the instruction sheet and that they are hand tightened/snugged. Critically important are the fasteners between the deck and base (especially those going through the deck and into the legs) and at the two joining plates that secure the two deck halves.

0


0

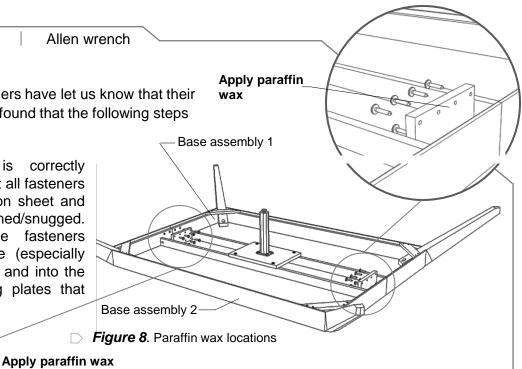

2. Verify that the center leg is not overextended and causing the bed to rock. A properly set levelling leg will be extended to touch the floor and then backed off very slightly so that a piece of paper can slip under it.

3. Verify that there is a small gap where the two deck halves meet and that the two deck halves are not rubbing together. It is OK for the trim on the edges of the deck halves to contact each other.

4. Apply the supplied paraffin wax stick to the base surfaces and joining plate faces that contact the base rail surface as shown in *Figures 8 and 9*. This will require that the bed is disassembled and the two deck halves are removed.

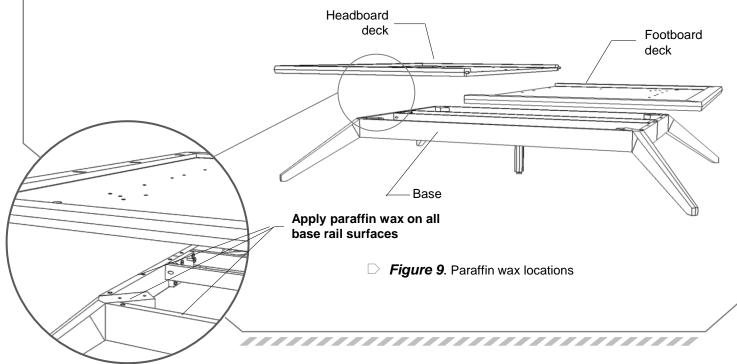

## **Care Instructions**

To care for and preserve the finish on your new Copeland Furniture piece, please keep the following recommendations in mind.

- While our furniture has been finished with a durable top coat, the surface may be sensitive to dents and abrasions during the first 30 days in your home.
- Treat the surface finish gently so it does not dent or chip. Tape or stickers should not be put on the finish.
- For general care use a soft cloth to dust the furniture.
- Use damp cloth with a mild soap to clean-up spills or dirt. Dry the surface thoroughly.
- Please do not use any polishes, waxes or solvents to clean the surface of the furniture. This holds true for new Copeland Furniture pieces as well as items you may already have in your home.
- Please do not place any candles directly on the surface of your furniture. The perfumes and dyes in the candles may penetrate the finish.
- Beds must be disassembled before moving to avoid damage. Never attempt to move the bed while it is assembled.

## Special Care Instructions for Cherry Furniture

Please read the following if you have purchased a Copeland product in cherry. Furniture that has been crafted from cherry wood becomes darker with age. The change in color, from a reddish tan to a reddish brown, is most noticeable during the first six months of ownership. It is important to understand that exposure to light accelerates the natural oxidization process. An object left on a cherry wood surface for an extended period of time may retard the aging process in a limited area. Simply remove the object and, over time, the surface will attain a uniform reddish brown color.



If you have any questions or difficulties, please call us at the number below between the hours of 8:00 am and 4:30 pm eastern time. **156 Industrial Drive, Bradford, VT 05033 Tel: 802.222.9282 Fax: 802.222.9285 www.copelandfurniture.com**