


USER MANUAL

LET'S GET STARTED.

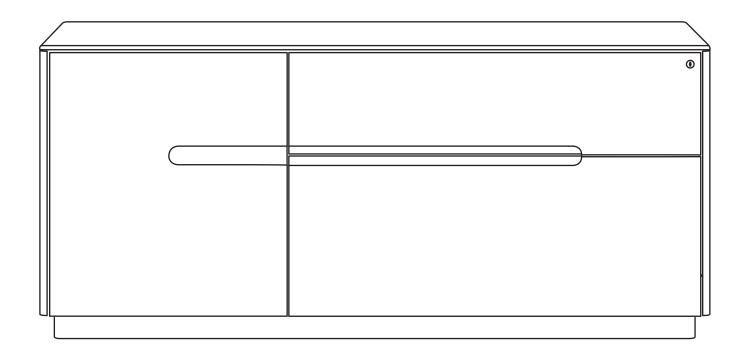

DESIGN BDI DESIGN STUDIO





Congratulations on the purchase of your Luma cabinet from BDI. Your cabinet has been designed to provide a lifetime of enjoyment. This manual will provide assembly instructions and other helpful information to ensure you get the most out of your product. Please save it for future reference.

Your Luma has been engineered for simple assembly. Please follow these directions carefully to prevent any damage.


Should you need further assistance, contact BDI at customerservice@bdiusa.com.




HARDWARE AND COMPONENTS

Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface, such as carpet. For missing hardware pieces, please contact BDI Customer Service at **customerservice@bdiusa.com**. For all other concerns, please contact your BDI retailer.

 
Do not use power tools for the assembly of this product.

 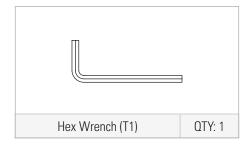


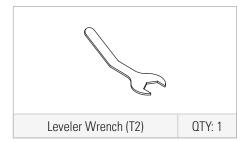













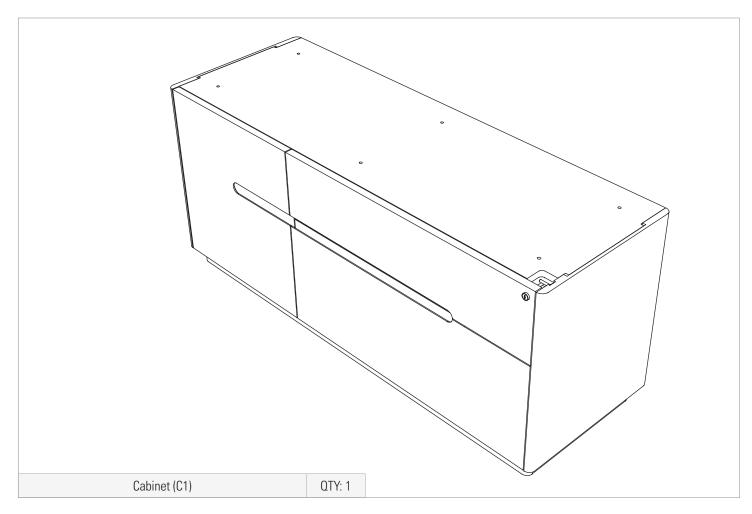



HARDWARE AND COMPONENTS

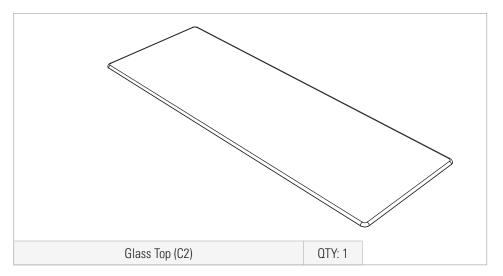

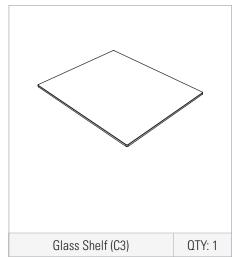

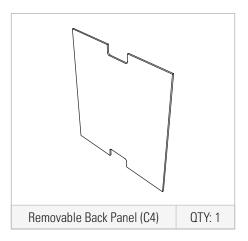


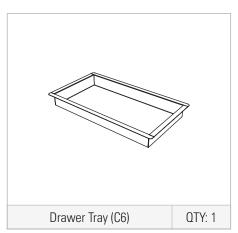

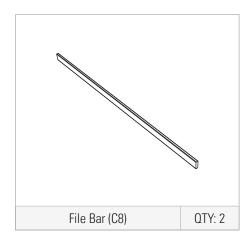





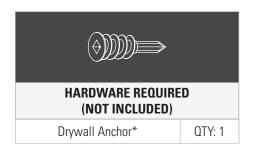




^{*}Use appropriate wall anchor and screw.


STEP 1. INSTALL RUBBER BUMPERS

Peel the backing off the adhesive backed **Rubber Bumpers (H2)** and stick them to the top of the **Cabinet (C1)**.



Use the bumper locations drawing provided.

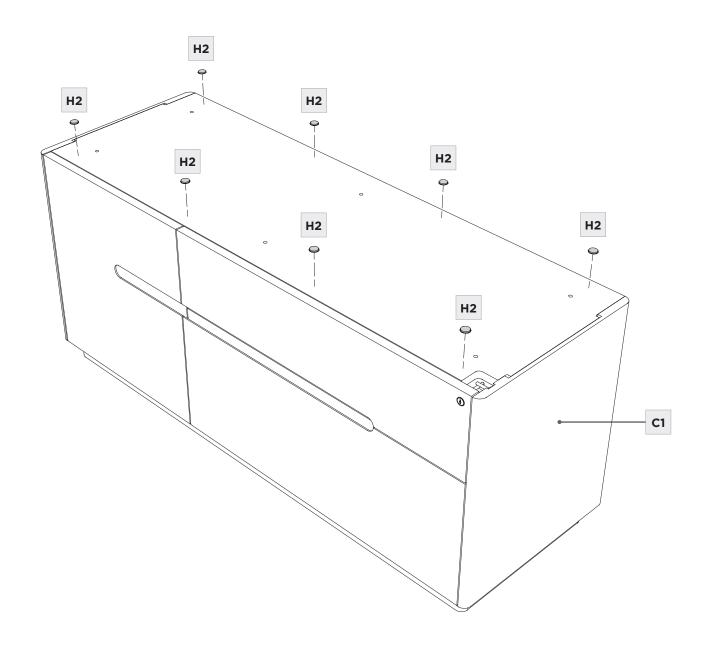

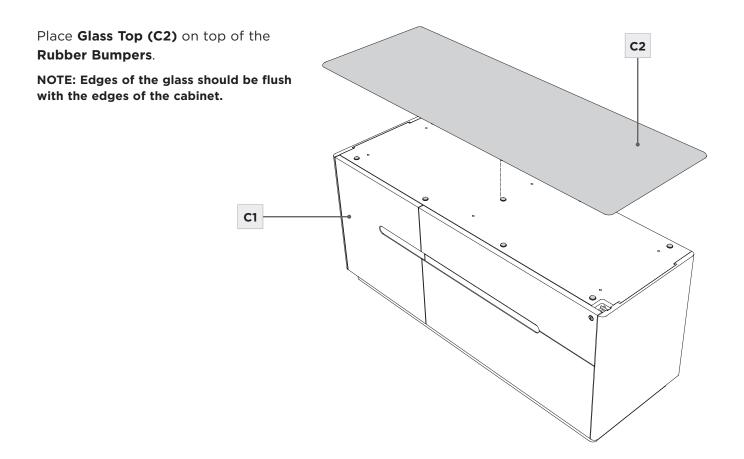


STEP 3. INSTALL GLASS SHELF


ASSEMBLY

Set the **Shelf Pins (H1)** to the desired hieght of the shelf. Tilt the **Shelf (C3)** slightly as you insert it into the cabinet and rest it on top of the **Shelf Pins (H1)**.

To adjust the shelf lift and tilt the shelf to remove it from the cabinet. Unscrew the shelf pins and move them to the designed height Reinstall the shelf.

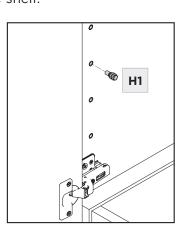




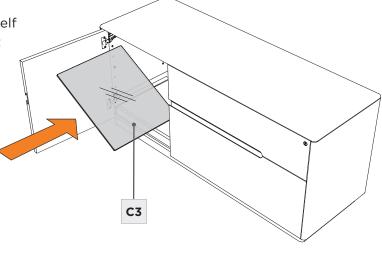

Install the **Removable Back Panel (C4)** by positioning the panel under the grooves on the underside of the cabinet top panel.

Lift the **Removable Back Panel (C4)** up and position the bottom of the panel above the grooves in the cabinet bottom panel then drop the panel in place.

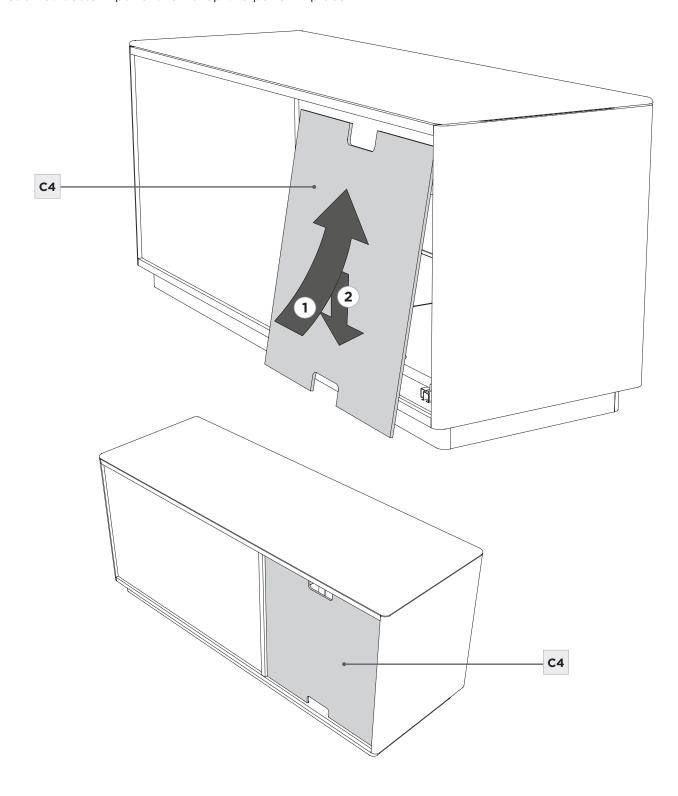


It is strongly recommended that you anchor your Luma Cabinet to the wall using the provided Anchor Strap (C10).

Measure 23" (584mm) up from the floor and 10.5" (267mm) from the outer edge of the cabinet and mark the wall as shown.


Attach one end of the Anchor Strap (C10) to the wall at the marked location with an appropriate wall anchor and screw (not included).

Carefully move your cabinet close to the wall and attach the loose end of the Anchor Strap (C10) to the underside of the top panel, in the left compartment of the cabinet, using the Screw (H6). Tighten with Hex Wrench (T1).

	HEX WRENCH – H1	QTY 1
	NOT INCLUDED PHILLIPS SCREWDRIVER	QTY 1
	SCREW - H6	QTY 1
	NOT INCLUDED WALL ANCHOR	QTY 1
€] 111111111111111111111111111111111111	NOT INCLUDED WALL SCREW	QTY 1

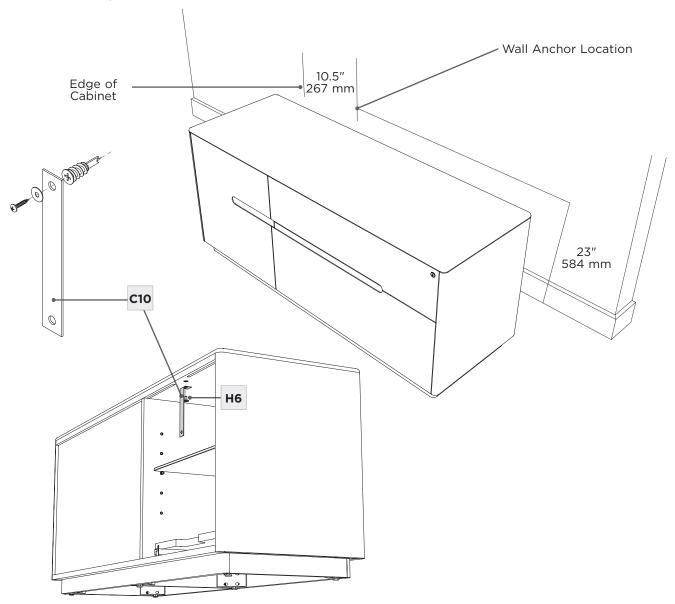

Once the unit is completely assembled and in its final position, adjust the levelers using the **Leveler Wrench (T1)**. Using a level (not provided), level your cabinet first side to side, and then front to back. If your cabinet is on carpeting, check your front to back level after loading the cabinet and opening the heaviest drawers. This will ensure the cabinet remains level during operation and prevents the risk of tip-over.

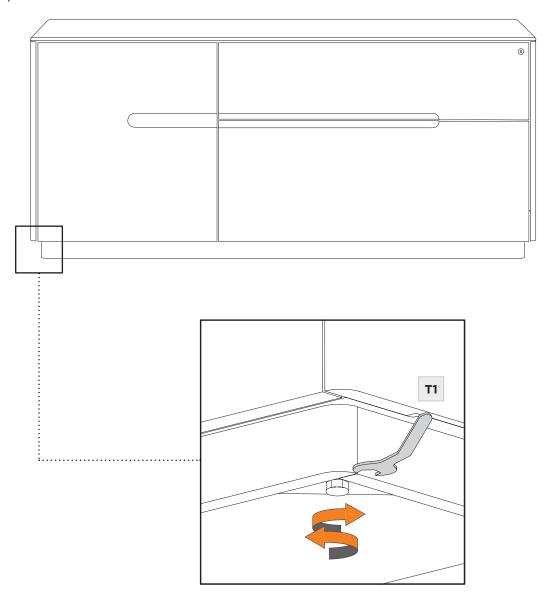

Your BDI furniture has been constructed with the finest materials, carefully manufactured, and designed to last a lifetime. Regular furniture care will prolong your enjoyment and keep it looking its best. Here are some general tips for taking care of BDI furniture. Your surfaces may vary.

GLASS

Glass surfaces are maintained using household glass cleaner and a paper towel or cloth.

SATIN-ETCHED GLASS

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth.

A 'Magic Eraser' removes minor scratches or scuffs not eliminated using a paper towel or cloth. 'Magic Eraser' is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface and the Magic Eraser, then rub the whole surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary. Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This process should not be required more than once per 6-12 months. See this brief video for the simple method: www.bdiusa.com/glass

WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature andunlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, grain, texture, and tone variation should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please avoid positioning your BDI cabinet in any area with ample direct sunlight. To learn more about the features of natural wood, visit www.bdiusa.com/wood

METAL, PORCELAIN, & PAINTED SURFACES

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

WARRANTY

BDI warrants to the original purchaser that for the below-stated warranty term, BDI will replace any product, part, or component covered by this warranty that fails under normal use as a result of a defect in material or workmanship. The decision to replace a complete product versus the part or component in question will be at BDI's sole discretion.

Residential Use: BDI Furnishings carry warranty coverage for three (3) years from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of product delivery.

Commercial Use: BDI Furnishings carry warranty coverage for one (1) year from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of the product delivery, based on an 8-hour daily use pattern.

BDI reserves the right to refine or update its warranty from time to time. See the complete and latest warranty document at www.bdiusa.com/warranty.

PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information, and helpful hints related to your BDI products.

Register today, and you will be entered to win free a BINK table from BDI: www.bdiusa.com/register





