



232810 & 272800 Antasia Portables

Component Parts

Δ	Fin	ıaı
$\overline{}$		ıaı

B Washer

C Diffuser

D Shade

E Harp

F Socket Knob

G Harp Holder

H Socket

I Locks (2)




232810 & 272800 Antasia Portables


CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJU-RY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Install Shade & Diffuser (Figures 1 - 3)

- 1. Carefully unpack the fixture from the carton.
- 2. Install socket knob (F) onto socket (Figure 1).
- 3. Remove finial (A) from harp (E) and save for later use. Finial is shipped installed on harp.
- 4. Squeeze harp (E) together while holding the locks (I) up towards the top of the harp (E) and slip into harp holder (G) (Figure 1).
- 5. Allow locks (I) to slip down harp (E) and onto harp holder (G) to secure harp in place.
- 6. Install bulb. "C" version bulb is included.
- 7. Slip shade (D), diffuser (C) and washer (B) onto threaded stud on top of harp (E). See Figure 3 for washer orientation.
- 8. Thread finial (A) onto threaded stud on harp (E) and tighten until snug. Be careful not to over tighten.

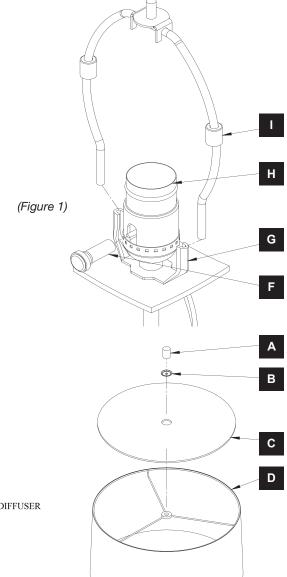

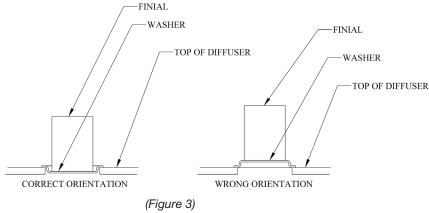



(Figure 2)

Ε