


Notice: Drawings will not match every Invigo configuration

Instructions for Invigo Desks

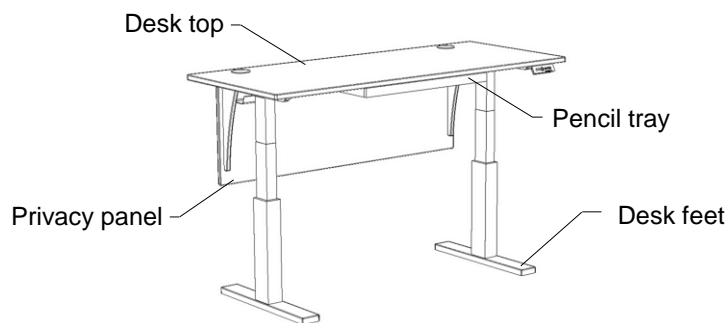


Tools required | none




First Time Operation


- Invigo desks include a generous wire management tray (**Figure 1.**) for routing the cords of all desktop accessories, powered inserts or other electrical devices. Users may wish to consolidate all cords into a surge protector (recommended) to guard against damage to the controller and other electronics during current irregularities.
- Level the desk with the floor surface by turning one or more of the four leg-levelers underneath the desk feet (**Figure 2**).
- Attach plug end of desk power cable or power strip with desk power cord attached to standard 110V/60Hz wall socket. Ensure there is enough play in the cable to allow the table to raise and lower.

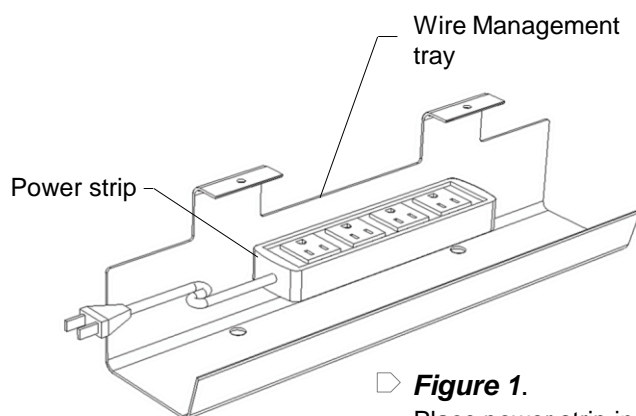

► **Figure 1.**
Place power strip in
wire management tray

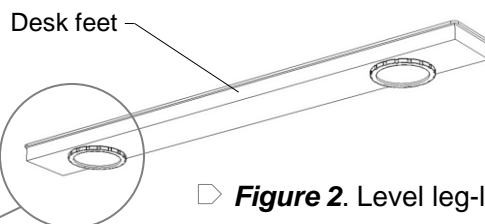

► **Figure 2.** Level leg-levelers

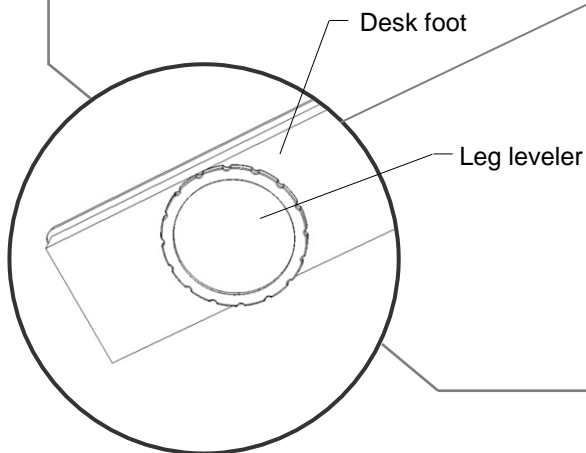


- Ensure that there are no obstacles either above or below the motion path of the desk and the power cable and that the desk is not touching any walls or other obstacles.

Digital Controller Operation

□ Basic operation



Figure 3.
Controller diagram

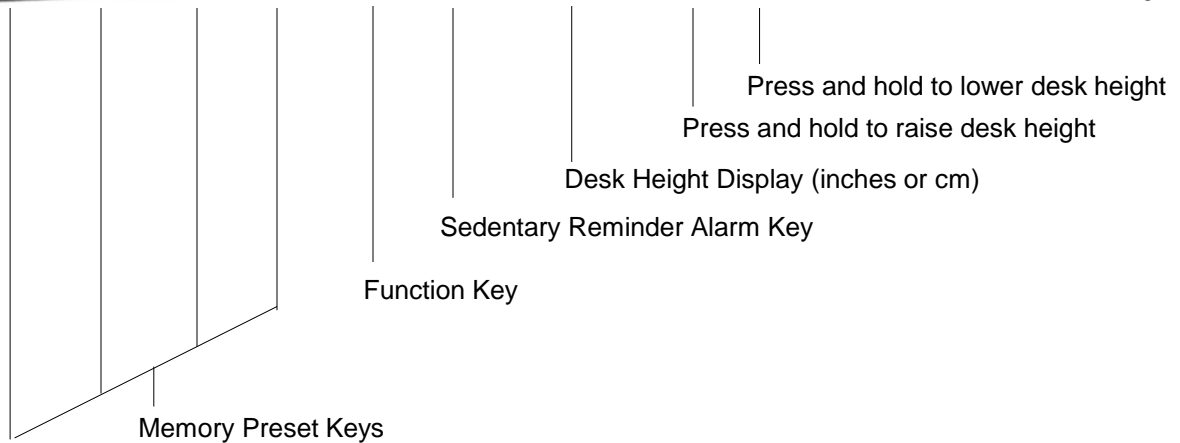

• Reset

The reset procedure must be completed prior to initial use, after parts have been replaced or in certain troubleshooting situations.

- **Press and hold the '+' and '-' keys simultaneously (for approximately 3 seconds).** Legs will begin to move down at half of normal speed.
- **Keep holding '+' and '-' keys** until legs reach the lowest position, rebound 2-5mm, then stop.
- **Release '+' and '-' keys to complete reset/initialization.**

• Memory Presets

- **Press and hold the '+' or '-' key** to desired height positions.
- **Press and hold any of the Memory Preset Key along with the 'S' Key** (approximately 3 seconds) to set the memory position.

- **Minimum/Maximum Height Setting**

Users are able to limit the upper or lower range of the desk according to the specific features of the room where the desk is being used. To set the minimum and maximum height:

- **Minimum Height Setting**

- **Adjust desk with '+' or '-' keys to the desired minimum height.**
 - **Press and hold the 'S' key and '-' key simultaneously** (approximately 3 seconds). *Once the controller shows "LLS" the Minimum Height is set.*

- **Maximum Height Setting**

- **Adjust desk with '+' or '-' keys to the desired maximum height.**
 - **Press and hold the 'S' key and '+' key simultaneously** (approximately 3 seconds). *Once the controller shows "HLS" the Maximum Height is set.*

- **Unlock Minimum/Maximum Height Setting**

- **Press and hold the 'S' key, '+' key and '-' keys simultaneously** (approximately 3 seconds). *Once the controller shows "LS-" the Minimum/Maximum Height settings are removed.*

- **Metric (cm) vs. Imperial (inches) Mode**

The Digital Display can be set to read either metric or imperial measurements.

- **Press and hold the '2' key and the '3' keys simultaneously** (approximately 3 seconds). *The height information will toggle between centimeters and inches.*

- **Anti-Collision Sensitivity**

Invigo Desks include an anti-collision safety feature that stops motion should the top encounter unexpected resistance. To adjust the sensitivity of this feature:

- **Press and hold the '+' and '1' keys (for approximately 3 seconds)** to toggle between Anti-Collision Sensitivity settings:
 - **A01 – High Sensitivity**
 - **A02 – Medium Sensitivity**
 - **A03 – Low Sensitivity**

- **Calibrate Height Setting**

Variances in top thickness and leg leveler height can result in small discrepancies between measured desktop height and displayed value. To correct for these variances:

- **Use the '-' button to lower desk to lowest possible height (remove Minimum Height Setting if necessary).**
- **Press and hold '-' for 10 seconds until displayed value begins flashing.**
- **Use +/- buttons to adjust displayed value to match measured height.**
- **Press and hold '-' for 5 seconds to save setting.**

- **Lock Height Setting**

- **To lock current height setting, press and hold 'S' for five seconds until the display reads LOC.**
- **Press and hold 'S' for five seconds again to unlock.**

- **Sedentary Reminder**

Invigo desks come equipped with an alarm to remind the user if a sedentary position has been maintained for a set period.

- **Press and hold the 'A' key** (approximately 3 seconds). *The sedentary reminder will toggle between 'on' and 'off'.*
- **Setting the reminder time.** Toggle the alarm to 'on', the screen will momentarily display the last time setting. While the time setting is displayed, press '+' or '-' to adjust the time. The selected time will save after 5 seconds without operation.
- When the Sedentary Reminder is on, if the desk is not operated within the set time, the alarm will sound for 5 seconds. If not operated, the alarm will sound again after an additional 5 minutes and then deactivate automatically. If the desk is operated before the set time is reached, the Sedentary Reminder will reset and count down from the set time.

Troubleshooting

Problem	Solution
Lift motor has stopped, or legs only move down	Unplug the base. Check the connection and plug in again. Reset the desk (procedure described above).
Legs rising slowly	Check if the input power is connected correctly
Over 5cm height difference between legs.	Perform reset.
Desk height lowers on its own	Check if the weight on the desktop exceeds 80kg
Desk won't raise or lower beyond a certain height	Remove Min/Max Height Setting and perform reset.

Common Error Codes: **E01 – lift column height difference** (perform reset), **E02 – excessive continuous operation** (stop operation for 20 minutes), **E03 – power failure during operation** (restore power and reset).

Should any of the above solutions fail to resolve the problem, please contact us at info@copelandfurniture.com

Care Instructions

To care for and preserve the finish on your new Copeland Furniture piece, please keep the following recommendations in mind.

- While our furniture has been finished with a durable top coat, the surface may be sensitive to dents and abrasions during the first 30 days in your home.
- Treat the surface finish gently so it does not dent or chip. Tape or stickers should not be put on the finish.
- For general care use a soft cloth to dust the furniture.
- Use damp cloth with a mild soap to clean-up spills or dirt. Dry the surface thoroughly.
- Please do not use any polishes, waxes or solvents to clean the surface of the furniture. This holds true for new Copeland Furniture pieces as well as items you may already have in your home.
- Please do not place any candles directly on the surface of your furniture. The perfumes and dyes in the candles may penetrate the finish.
- Heat for long periods of time from a laptop computer may damage the finish so please use some padding below the laptop to disperse the heat.

Special Note – Cherry Desk Tops

Please read the following if you have purchased a Copeland product in cherry. Furniture that has been crafted from cherry wood becomes darker with age. The change in color, from a reddish tan to a reddish brown, is most noticeable during the first six months of ownership. It is important to understand that exposure to light accelerates the natural oxidization process. An object left on a cherry wood surface for an extended period of time may retard the aging process in a limited area. Simply remove the object and, over time, the surface will attain a uniform reddish brown color.

