Storage Bed Assembly

Unpack the bed parts onto a soft, level surface and identify the following components:

(1) Headboard, (1) Footboard, (2) Storage Rails, (7) Plywood Deck Pieces, (2) Vertical Plywood Ends, (2) Center Support Legs with adjustable leveler (4 3/8" for Berkeley, Monterey, and Sarah Beds, 3" for Mansfield 49" Bed and 1 5/32" for Mansfield 40" and Moduluxe Beds) (16) #10 x 1 ½" Lag Screws – black, (4) ¼" – 20 x 35mm hex bolts, (1) Allen Wrench, (1) Side Rail attachment hardware kit in a separate bag.

Assembly of this bed will require 2 people. Tools required for assembly - hex head (Phillips) screw driver. Empty all boxes to be sure you have everything before you start.

Place each side rail/storage unit near where you intend to have them once you have the bed fully assembled. The headboard will attach to the end with more space between the drawer and the end.



Attach 2 of the plywood deck pieces across the top near either end of the storage rails (See image above) using a #10 x 1 ½" screw in the hole at the end of each piece. The remaining holes will not be utilized.




Attach the 2 vertical plywood ends to either end of the storage rails using 2 of the 1" machine screws supplied for each piece. (See image above)

Attach the headboard and footboard to the storage rails per the instructions in the separate hardware kit. Be sure to thread the nut onto the end of the studs before attaching the side rail to either the headboard or footboard.



Attach a center support leg to the inside of each of the storage rails.

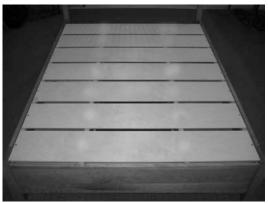

Attach the 5 remaining plywood deck pieces across the top of the unit using the remaining #10 x 1 $\frac{1}{2}$ " screws. Note the center deck piece has 2 sets of holes side-by-side. (See image above)

Important: Please Note:

Beds must be disassembled before moving to avoid damage. Never attempt to move the bed while it is assembled. Failure to do so would void the warranty.

Care Instruction

To care for and preserve the finish on your new Copeland Furniture piece, please keep the following recommendations in mind.

- While our furniture has been finished with a durable top coat, the surface may be sensitive to dents and abrasions during the first 30 days in your home.
- Treat the surface finish gently so it does not dent or chip. Tape or stickers should not be put on the finish.
- For general care use a soft cloth to dust the furniture.
- Use damp cloth with a mild soap to clean-up spills or dirt. Dry the surface thoroughly.
- Please do not use any polishes, waxes or solvents to clean the surface of the furniture. This holds true for new Copeland Furniture pieces as well as items you may already have in your home.
- Please do not place any candles directly on the surface of your furniture. The perfumes and dyes in the candles may penetrate the finish.
- Beds must be disassembled before moving to avoid damage. Never attempt to move the bed while it is assembled.

Special Care Instructions for Cherry Furniture

Please read the following if you have purchased a Copeland product in cherry. Furniture that has been crafted from cherry wood becomes darker with age. The change in color, from a reddish tan to a reddish brown, is most noticeable during the first six months of ownership. It is important to understand that exposure to light accelerates the natural oxidization process. An object left on a cherry wood surface for an extended period of time may retard the aging process in a limited area. Simply remove the object and, over time, the surface will attain a uniform reddish brown color.