
American Leather Comfort Recliner Battery Installation 2019 01/23/2019 P1

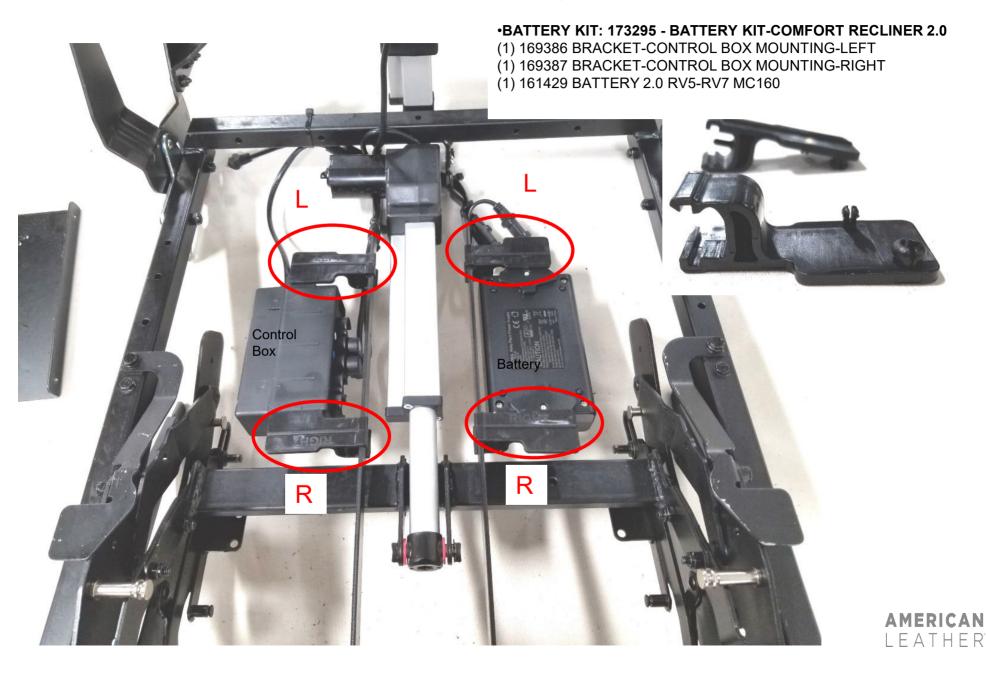

American Leather Comfort Recliner Battery Installation 2019

01/23/2019 P2



Orient Battery bottom with cords on the left. Install **RIGHT Bracket** on the right side and snap the fitting into the battery mounting holes as shown



LEFT and RIGHT Bracket mounted on Battery



AMERICAN LEATHER

Cut Zip Tie from Power Extension Cords as shown

American Leather Comfort Recliner Battery Installation 2019 01/23/2019 P3



Line up Guide Pin on Right Bracket with hole in Motor Guard Bar. Hook Top Groove onto Bar and swing Battery down to snap in place



01/23/2019 P4



Battery snapped into place and Power Extension Cords plugged into Battery- shown from bottom of mechanism

AMERICAN LEATHER