

# Congratulations on your Bernh. Pedersen & Son Sideboard! Please read before unpacking.

Please carefully follow the instructions below before unpacking to ensure the safety of yourself and your new sideboard. This task requires two people. Failure to follow the instructions can result in personal injury and/or damage to your sideboard.




## STEP 1: INSPECTION

Your sideboard should not have any visible serious damage to its packaging. Please make sure there are no punctures to the sidewalls and top. The metal corners should be intact, and the pallet risers on the bottom should not be broken. ***If you notice any damage, please contact us immediately before delivery drivers leave.***

(262) 633-6345

[torben@hanseninteriors.us](mailto:torben@hanseninteriors.us)

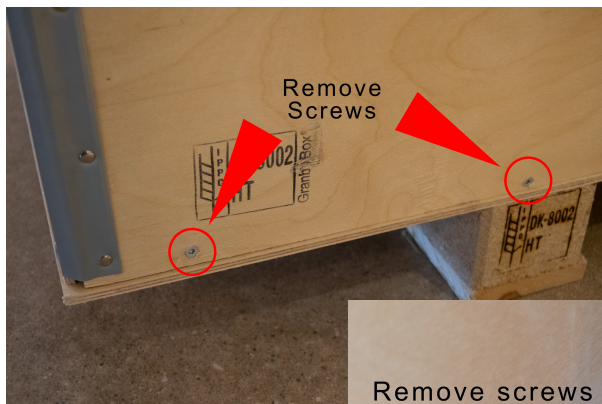

## STEP 2: REMOVE SCREWS

Remove the screws along the bottom-side perimeter of the box (these are all visible and unobstructed from view/access).



Bernh. Pedersen & Son often uses Torx bit (also know as star bit) screws. Not all BP&S crates are secured using the same bit or bit size. Having a proper bit set and drill will make uncrating your new sideboard seamless.

### STEP 3: TWO PERSON LIFTING

Do not attempt to lift the crate top off without the assistance of a second person. There are Styrofoam protectors that add extra resistance. Pulling the top off evenly with two people ensures your safety and the safety of your sideboard.

Corner Styrofoam may come loose as you remove the top. Having a third person to assist with obstacles as you remove the top may be helpful.

Be careful to lift the crate top clear of the sideboard to prevent damage. You may wish to protect floors from sharp-edged packaging.

Remove all protective packaging from the sideboard. Inspect. ***Again, if there is any concealed damage, please contact us immediately.***

**(262) 633-6345**

**torben@hanseninteriors.us**

With two people, lift the sideboard off the bottom of the crate. Please dispose of the crate responsibly. Thank you!

