


STICKLEY®


BED ASSEMBLY INSTRUCTIONS FOR BED IRON CONSTRUCTION

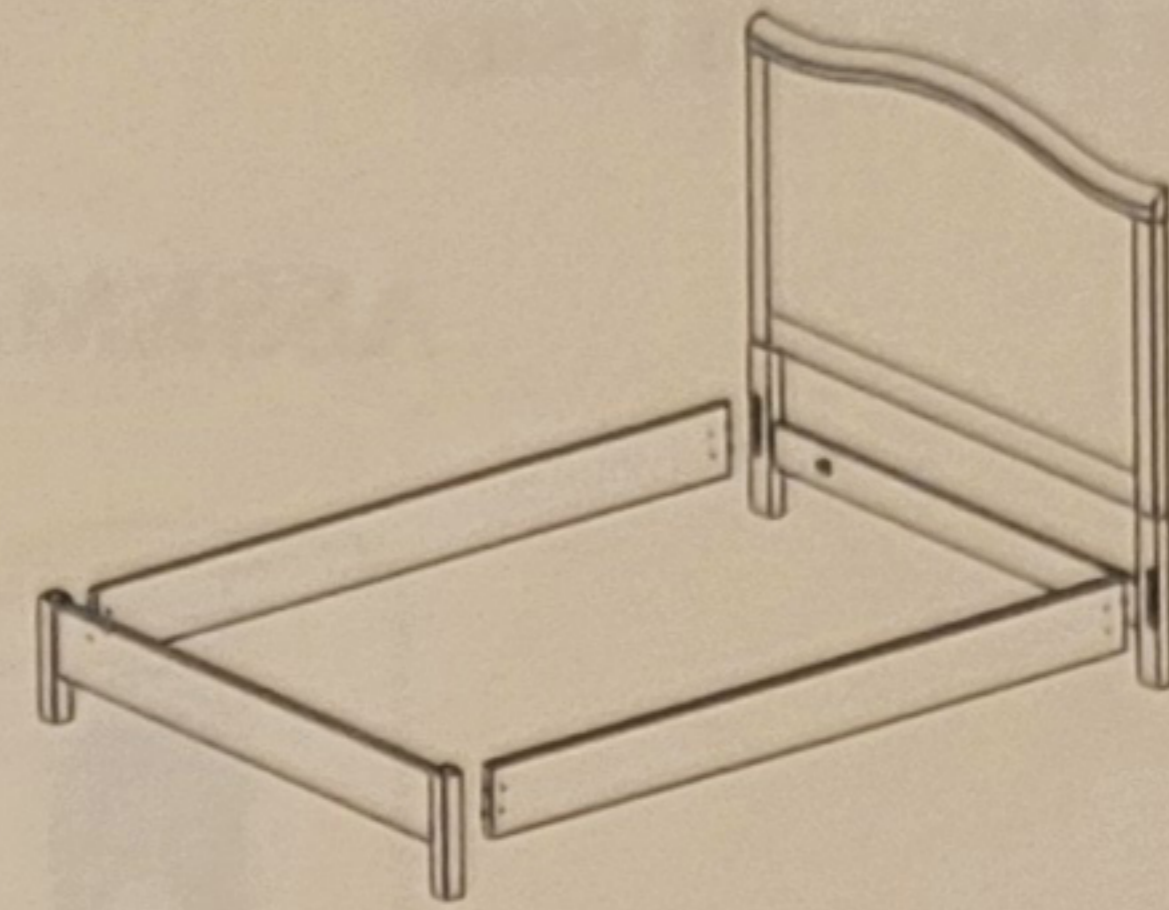

Congratulations for choosing Stickley. Your new bed has been designed and made using the finest materials and craftsmanship available. It will provide generations of service if properly maintained. Read these instructions thoroughly before setting up the bed and keep these instructions for future use.


- 1) Remove all packaging materials from your bed.
- 2) Assemble the bed with a minimum of (2) people.
- 3) Insert the two screw heads at the end of each side rail into the bed iron located in the headboard and footboard.
(NOTE: DEPENDING ON THE MODEL, YOUR SIDE RAILS MAY BE EQUIPED WITH WOOD CLEATS OR ANGLE IRONS. THESE SHOULD BE ORIENTED TO THE INSIDE OF THE BED AND TOWARDS THE BTM EDGE OF THE SIDE RAIL.

DIS-ASSEMBLED RAIL & POST

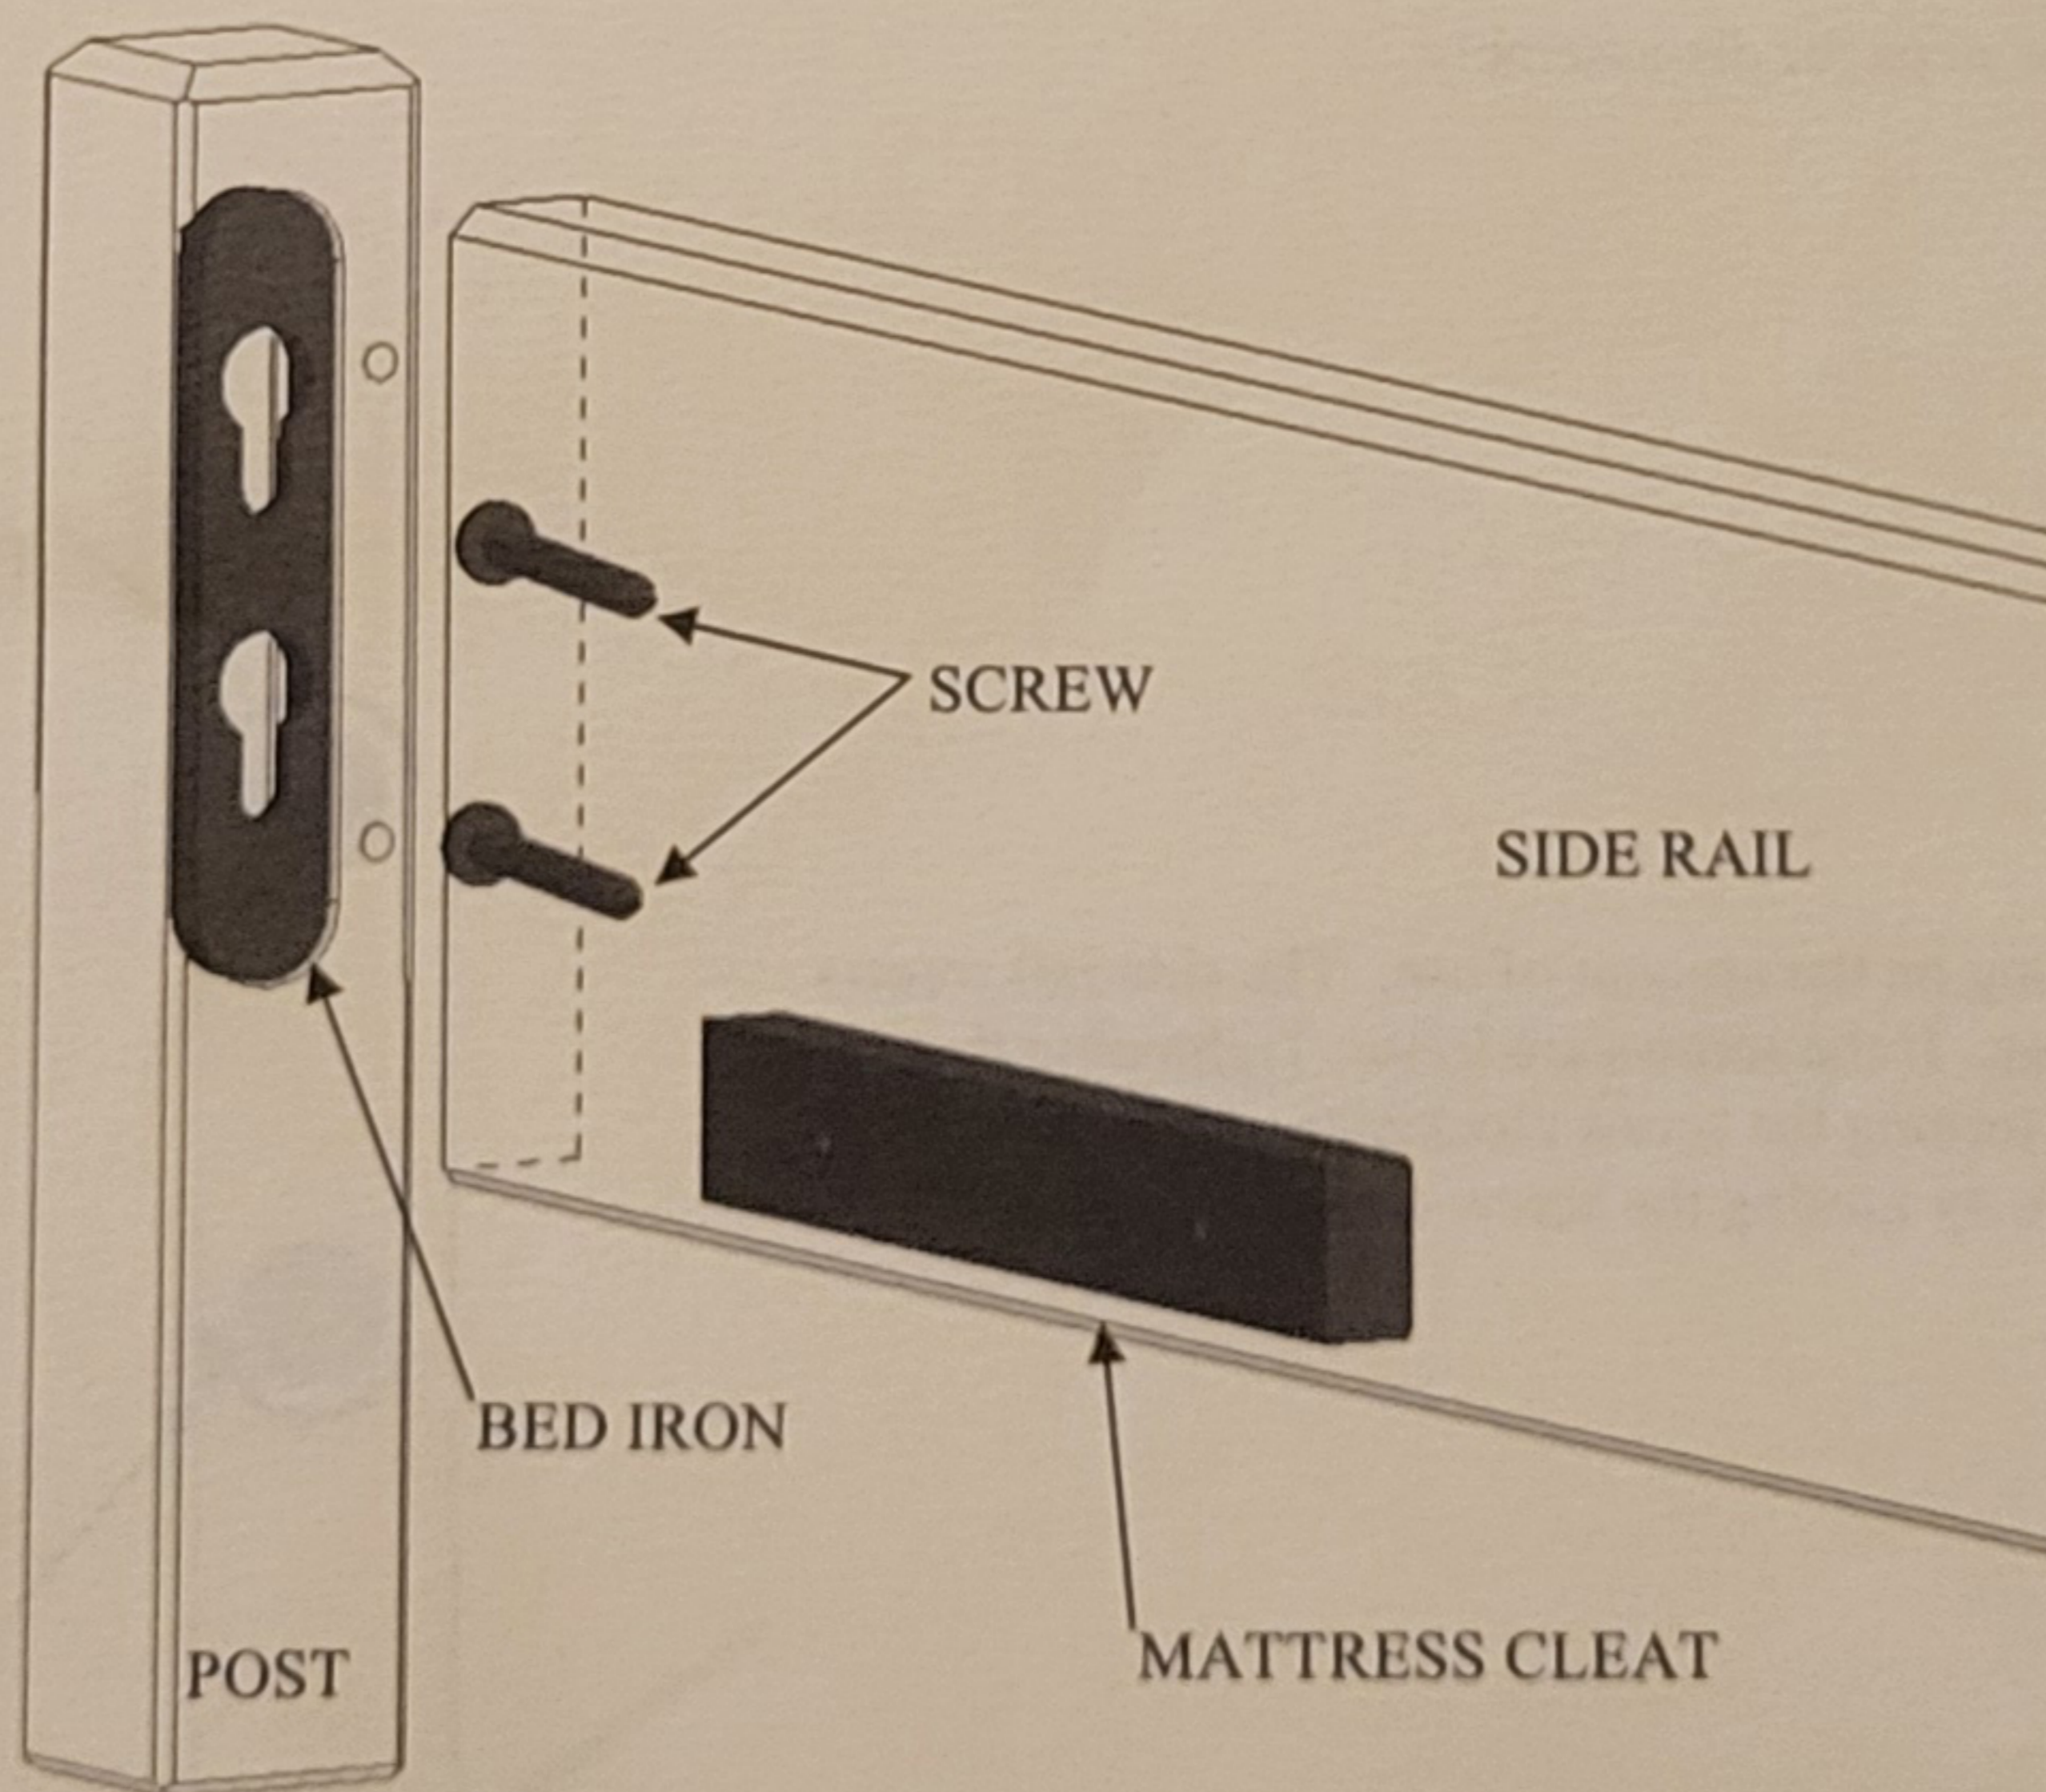


4) Push down on the side rail until the rail is locked in place.
(DO NOT USE EXCESSIVE FORCE, THIS COULD DAMAGE YOUR SIDE RAIL).

ASSEMBLED RAIL & POST

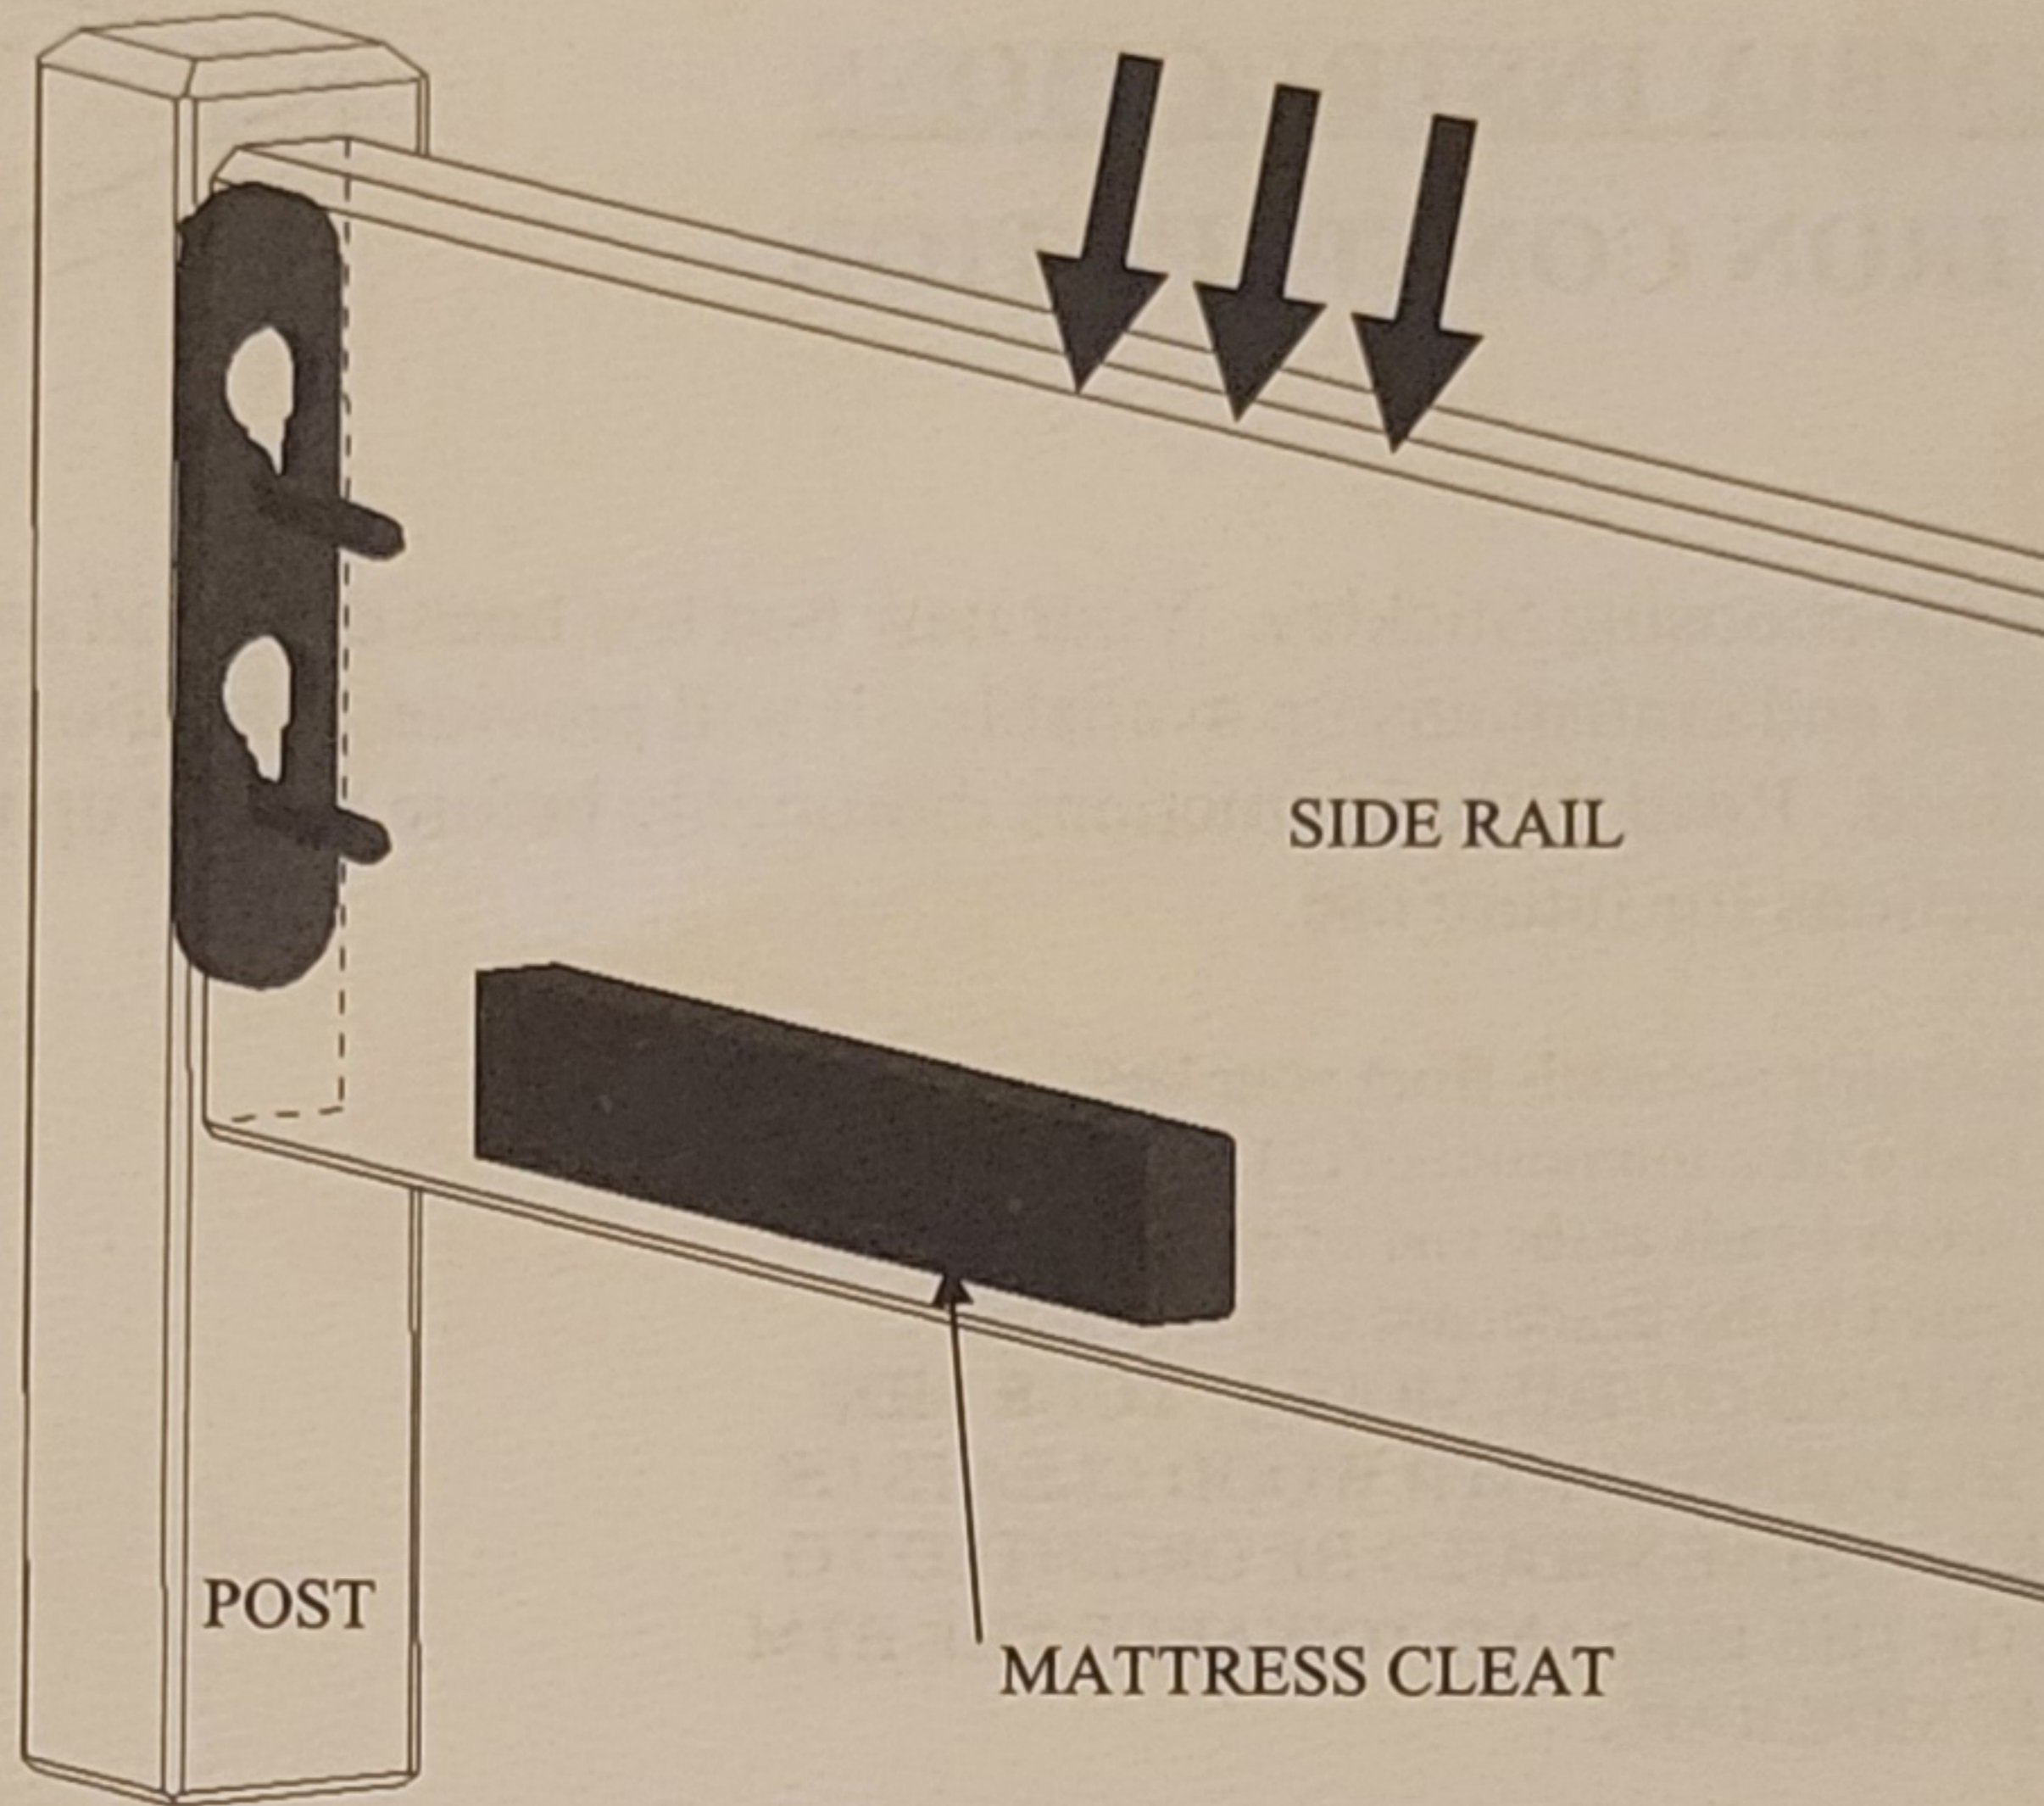


5) Reverse these steps for dis-assembly.


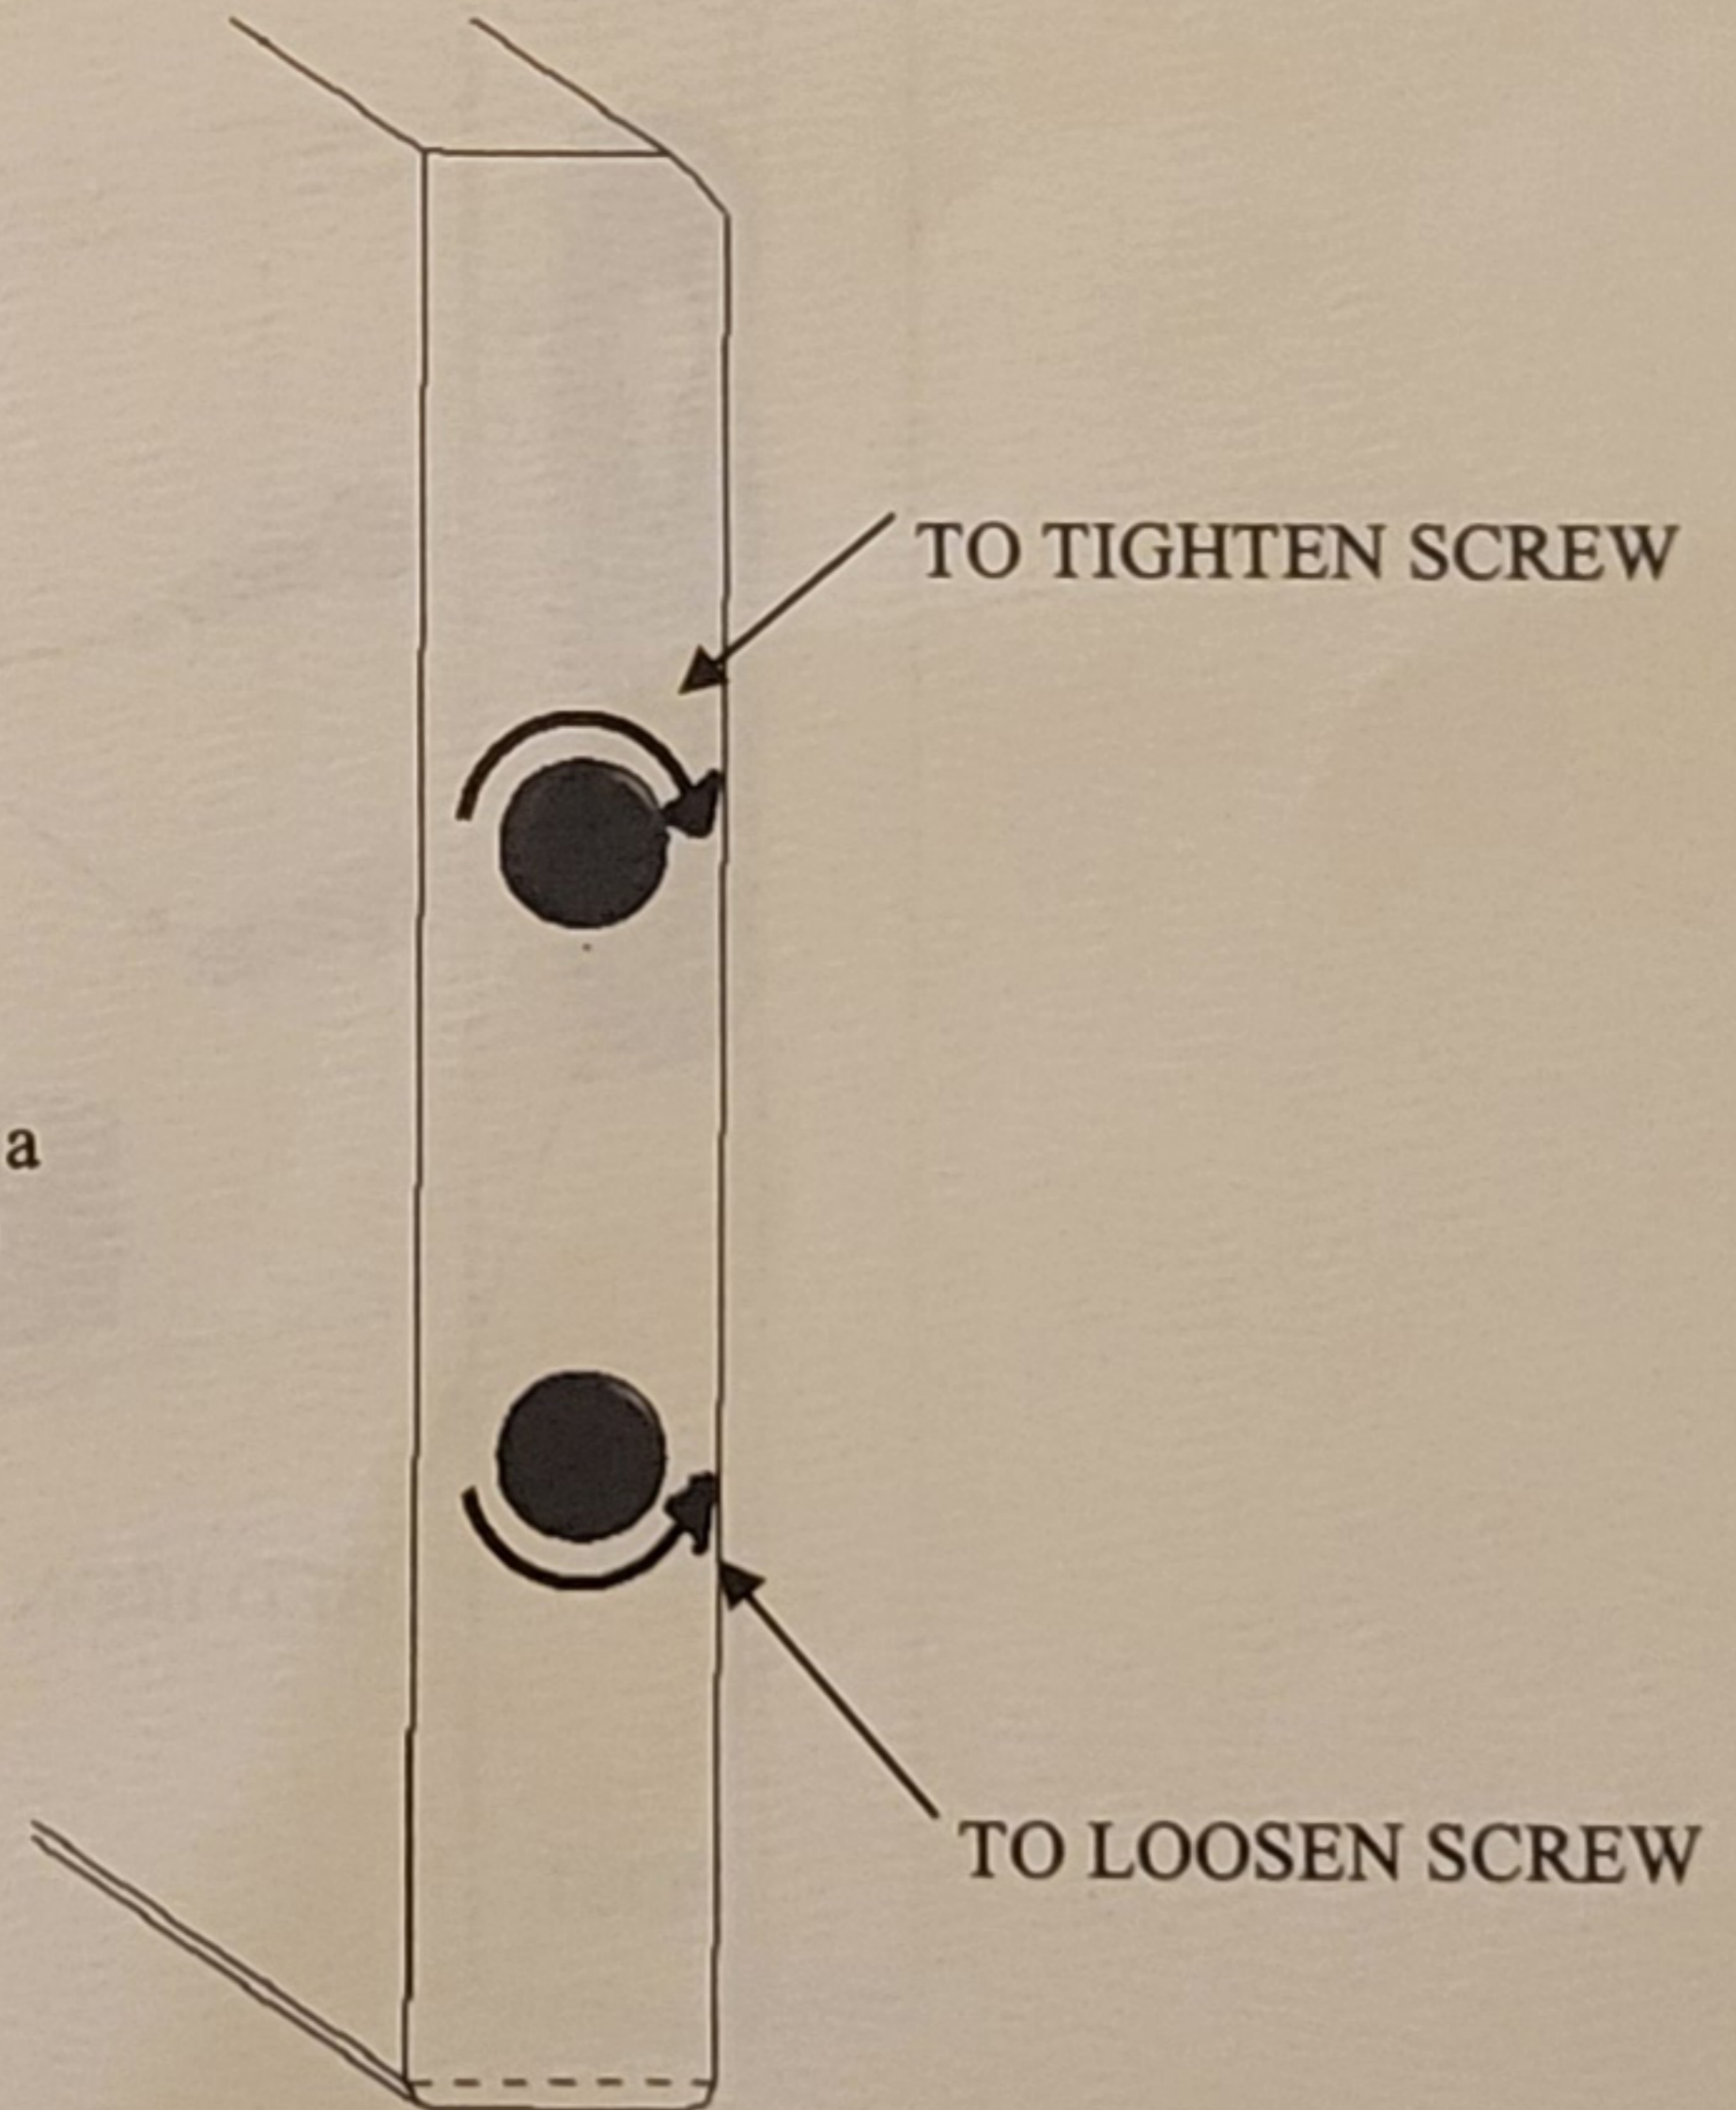


NOTE: Depending on the amount of use, The side rail screws may become loose. If the screws are loose, Tightening them is a simple matter of turning the screw clockwise. If the screws are tight, loosen them by turning the screw counter clockwise.



BED SLAT ASSEMBLY INSTRUCTIONS

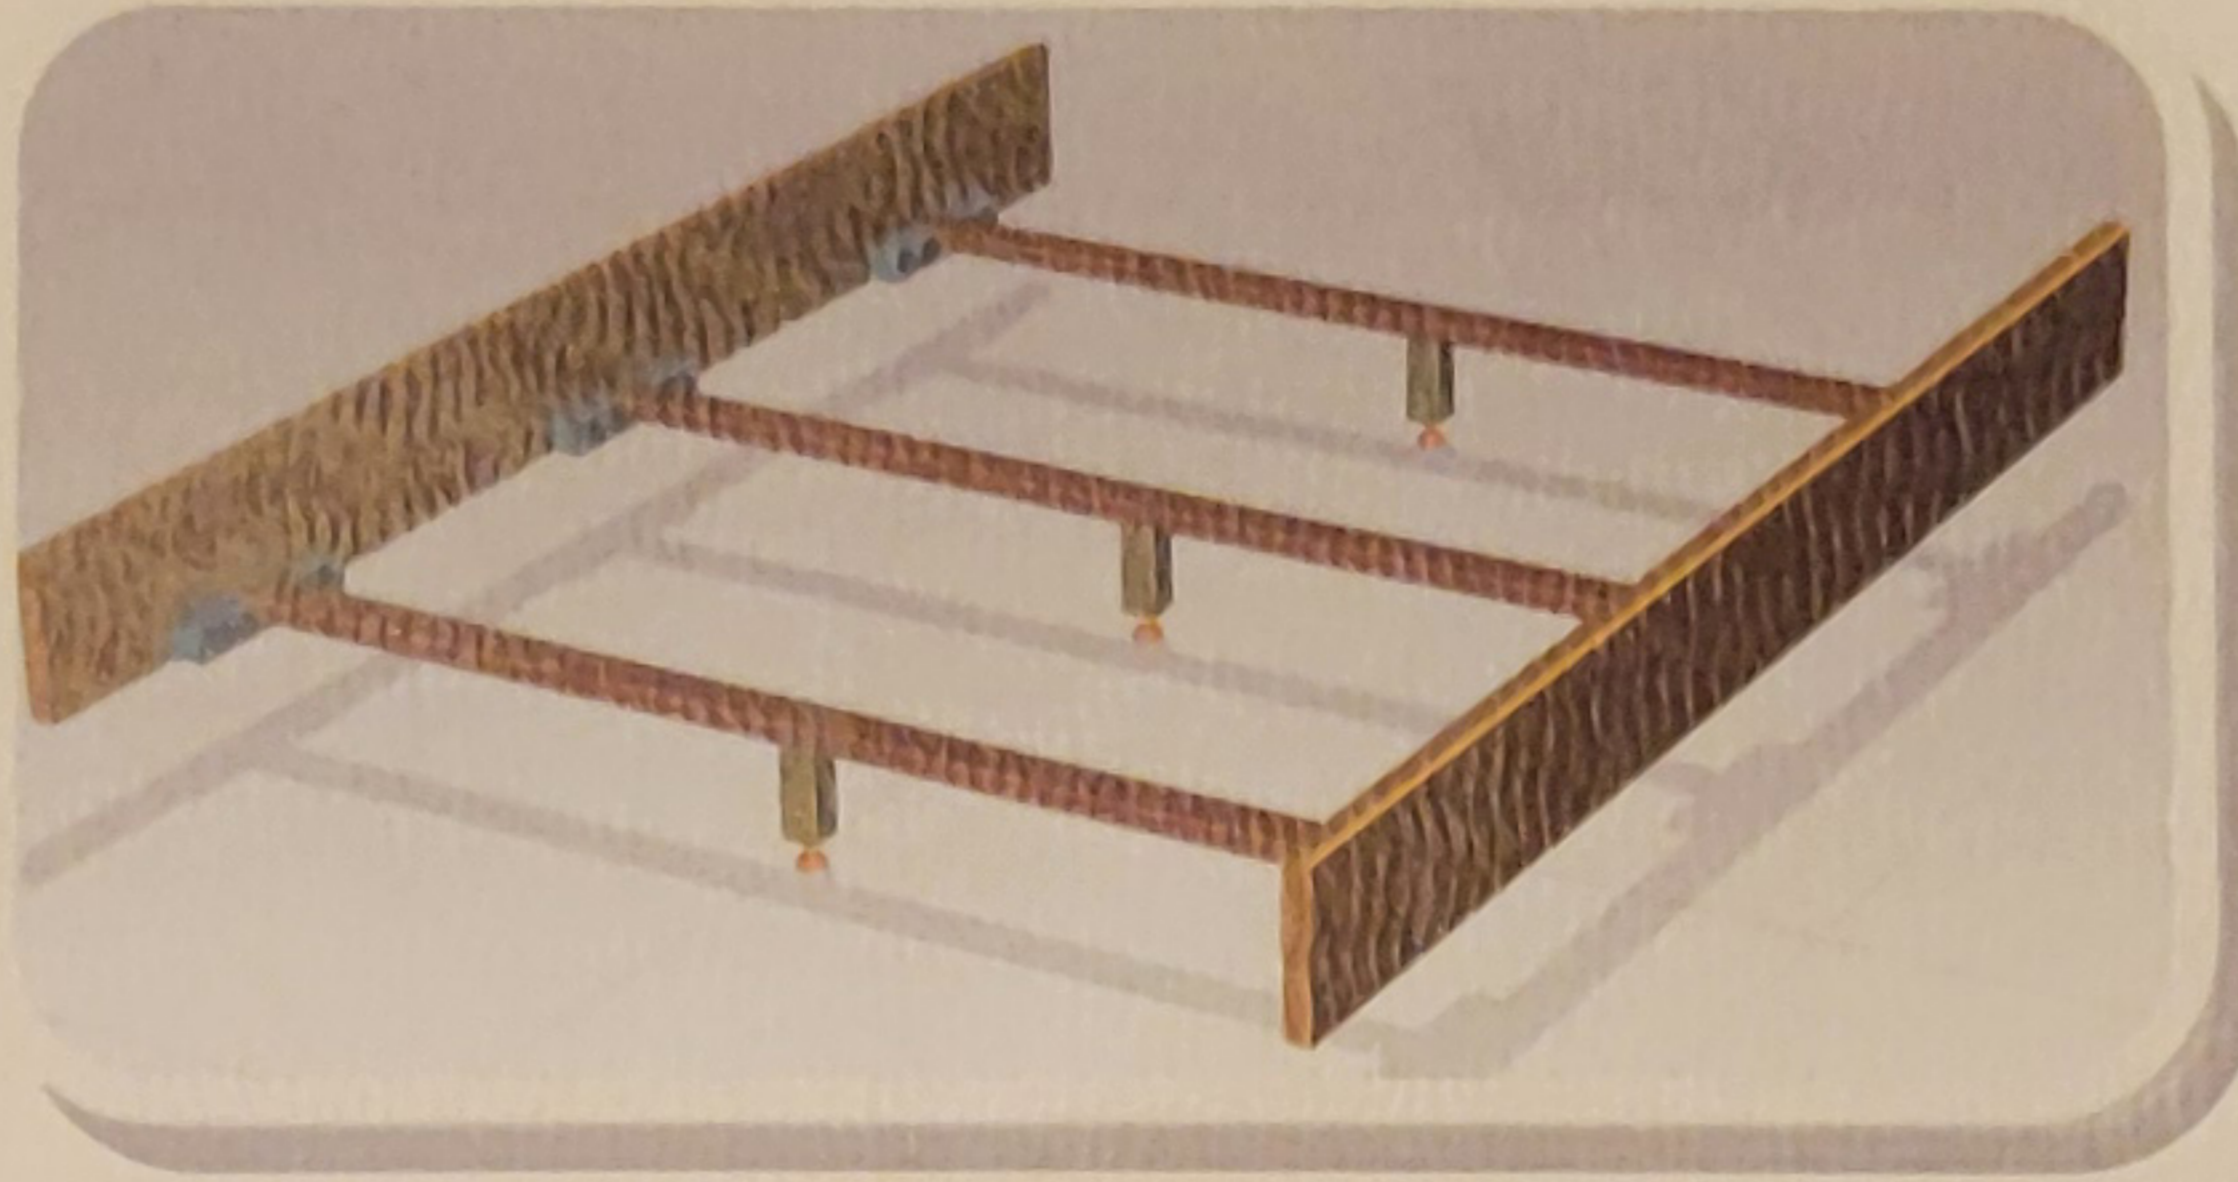

1 - Thread the center support leg into the bed slat. The threaded insert on the bed slat should be facing up.

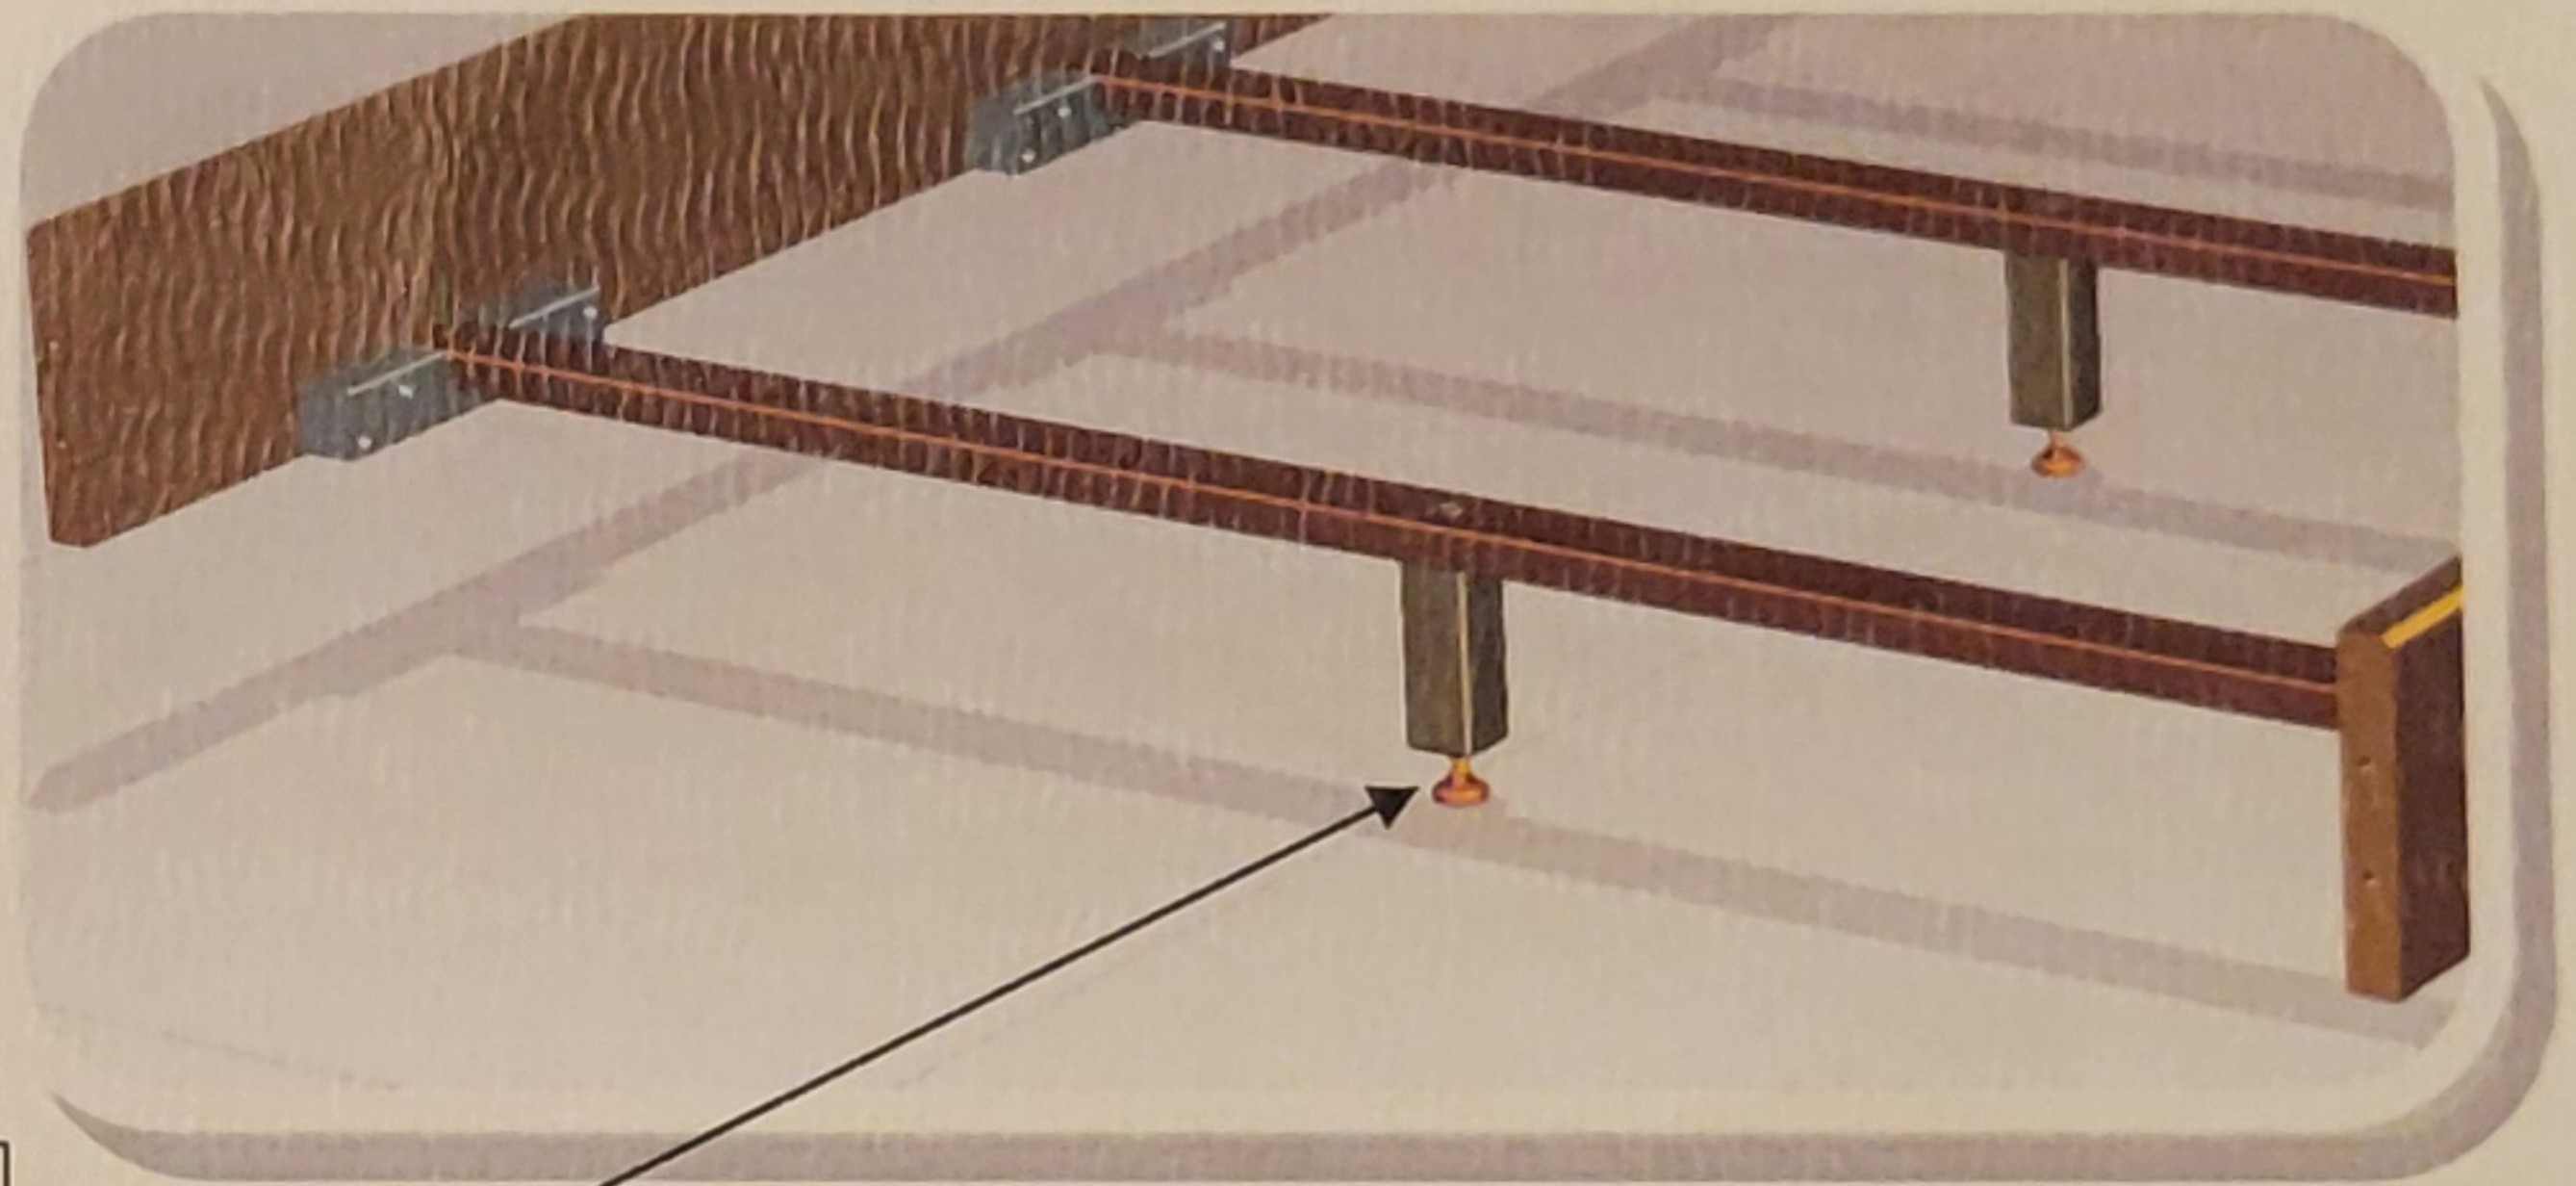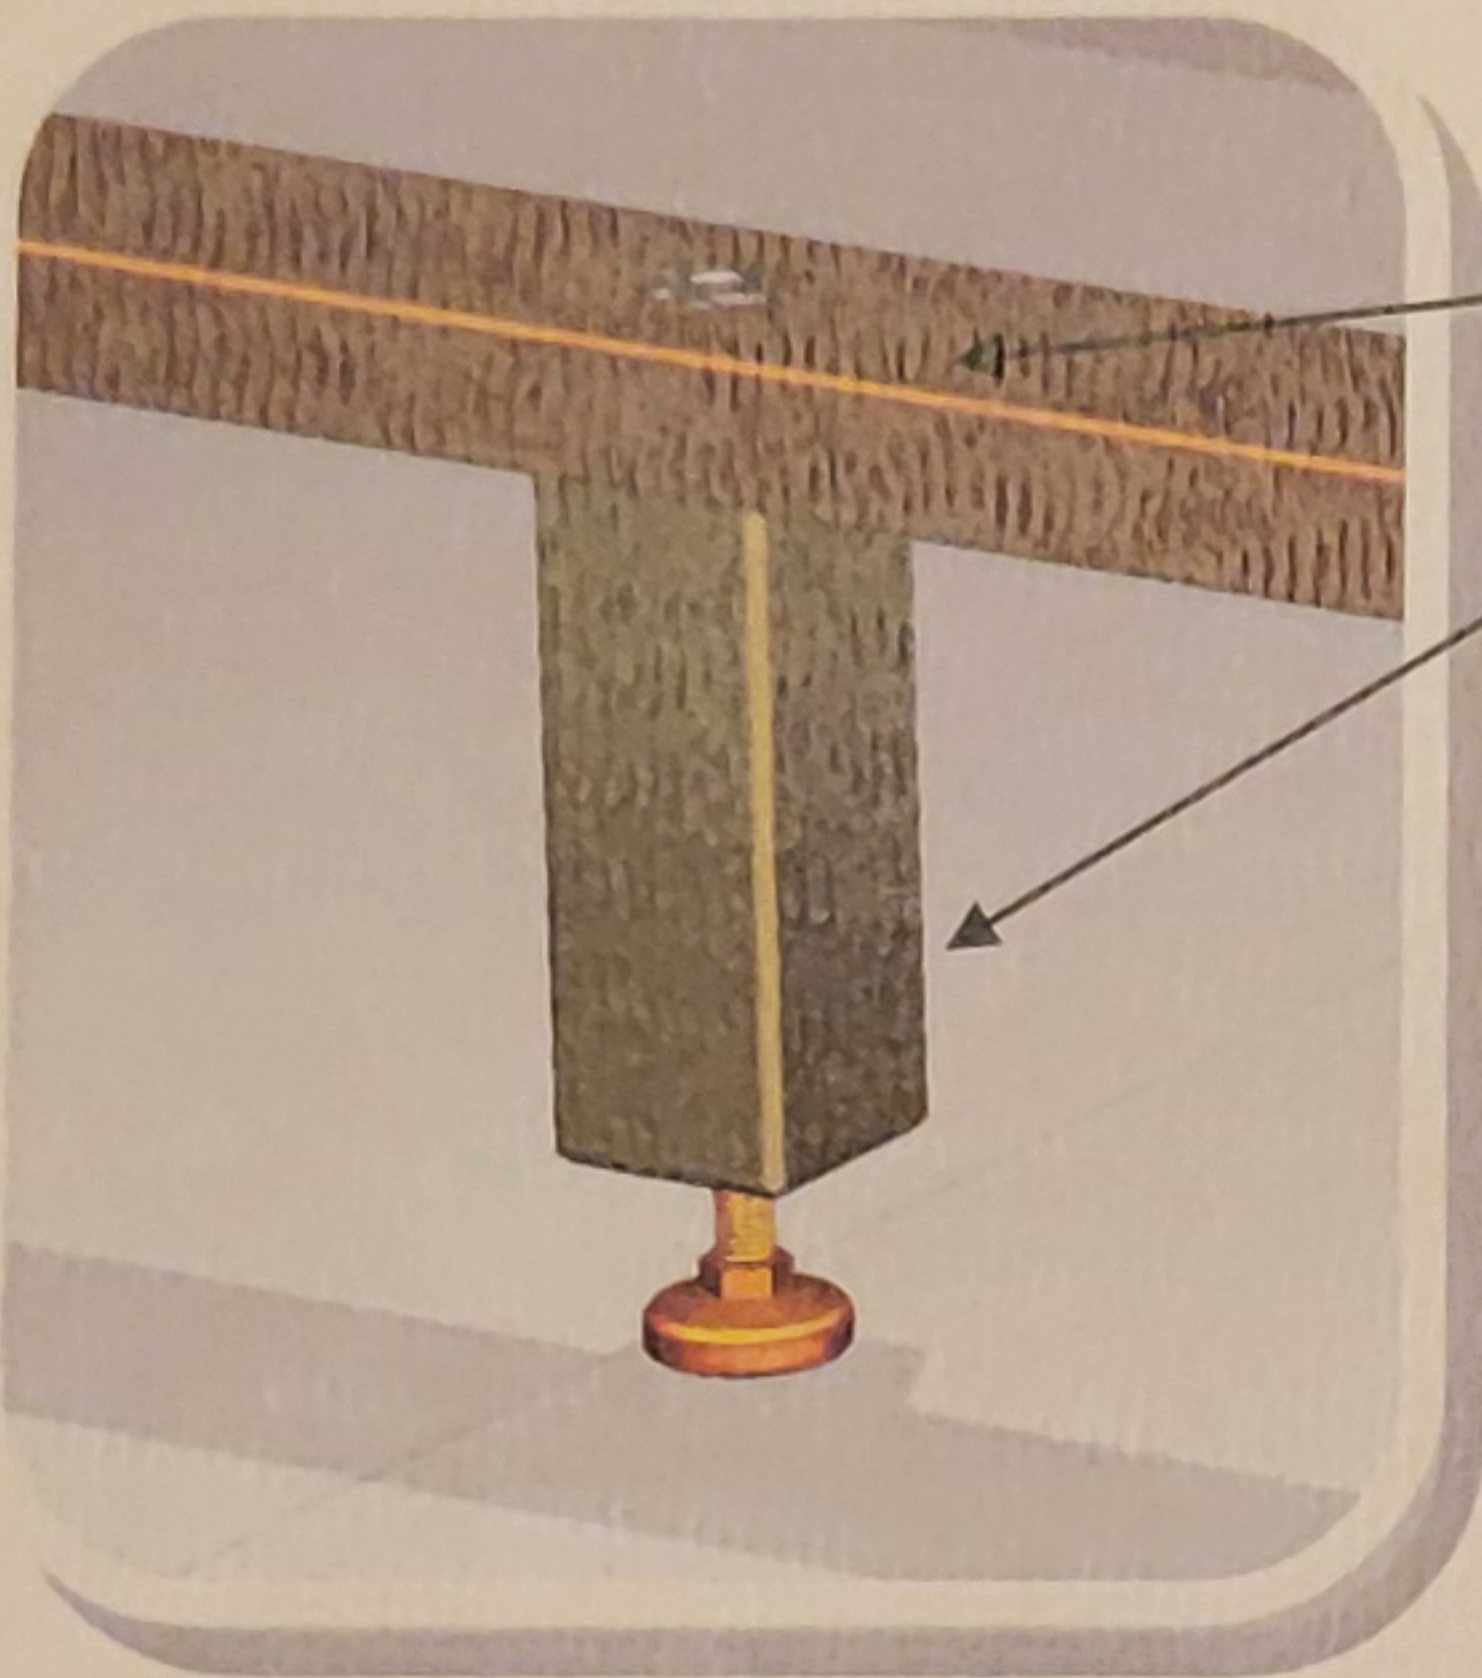

2 - Insert the bed slats into the notch's on the cleats that are attach to the bed rails. Unscrew the adjustable leveler on the bottom of the support legs until it touch the floor. Then center the bed slats between the two bed rails.

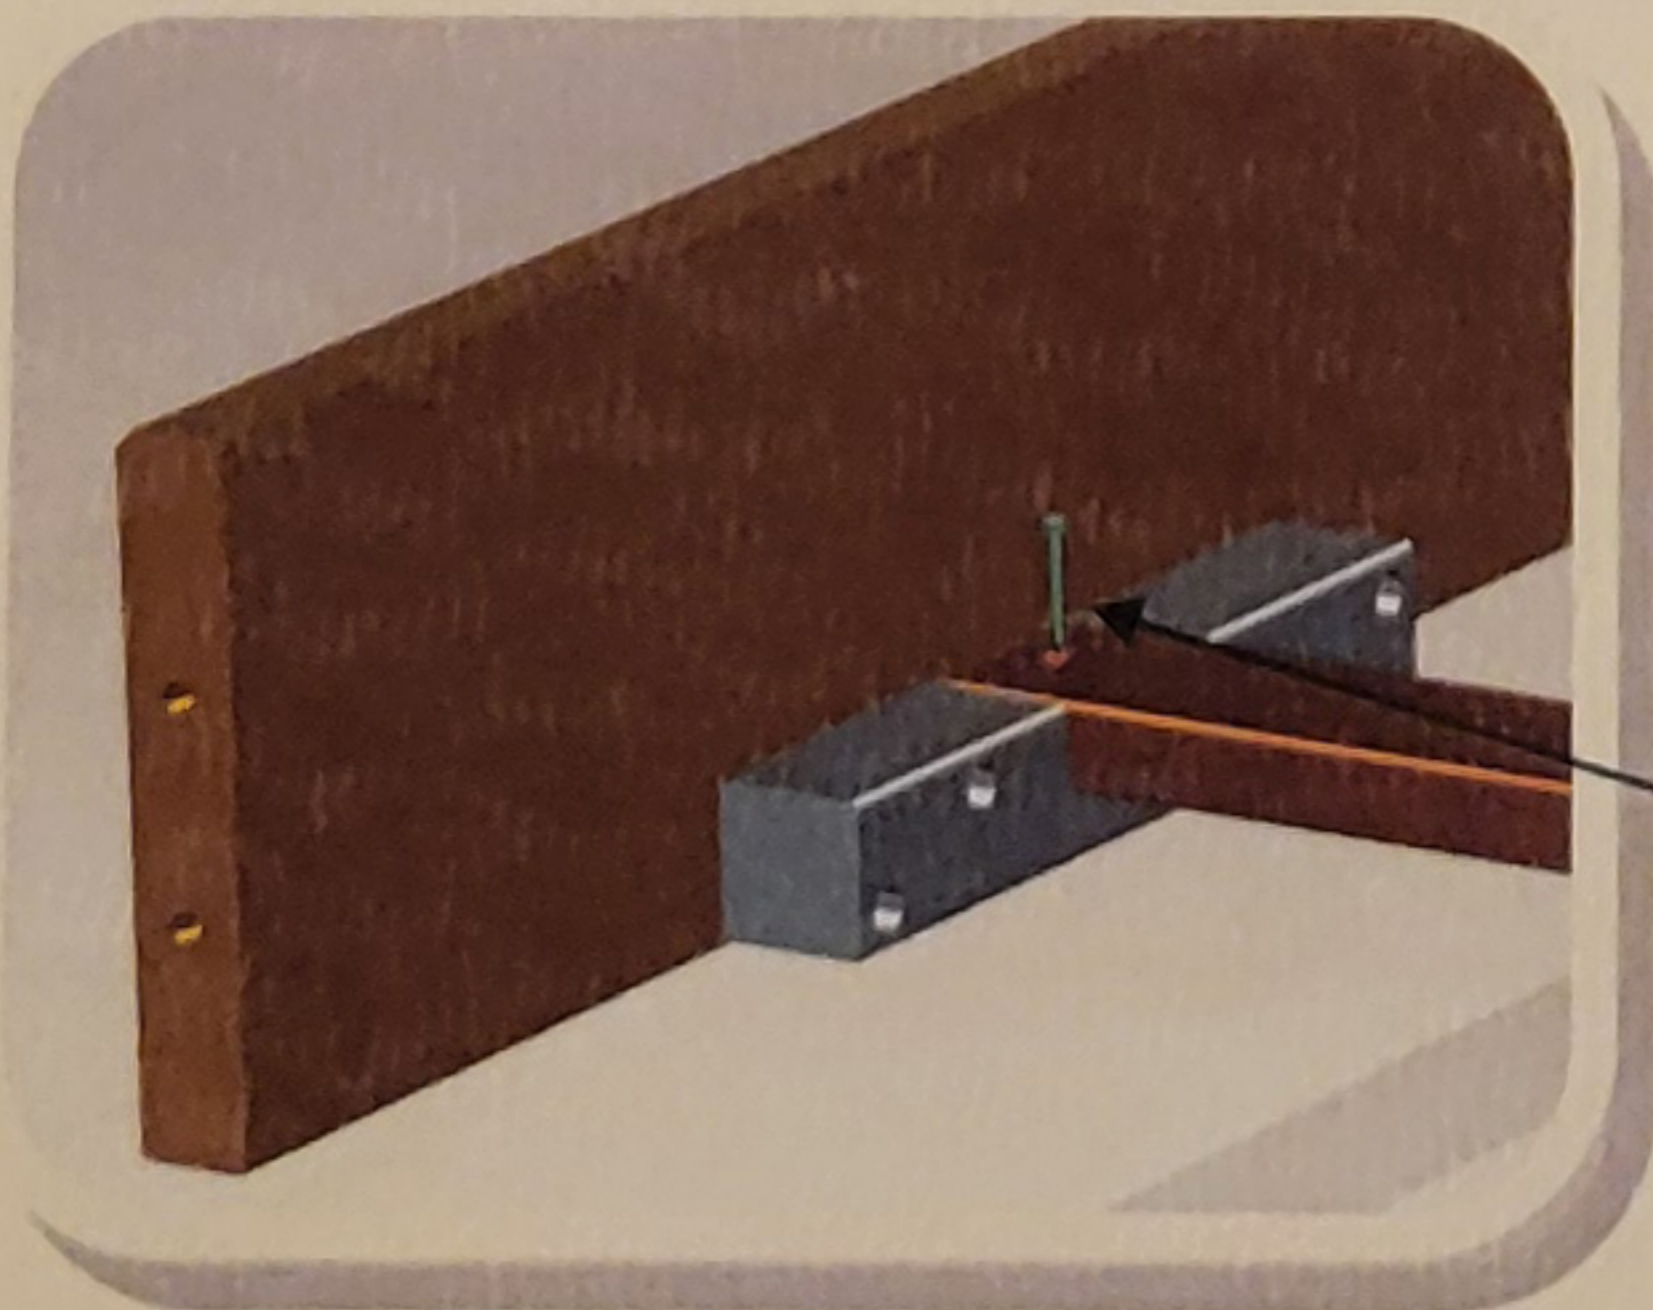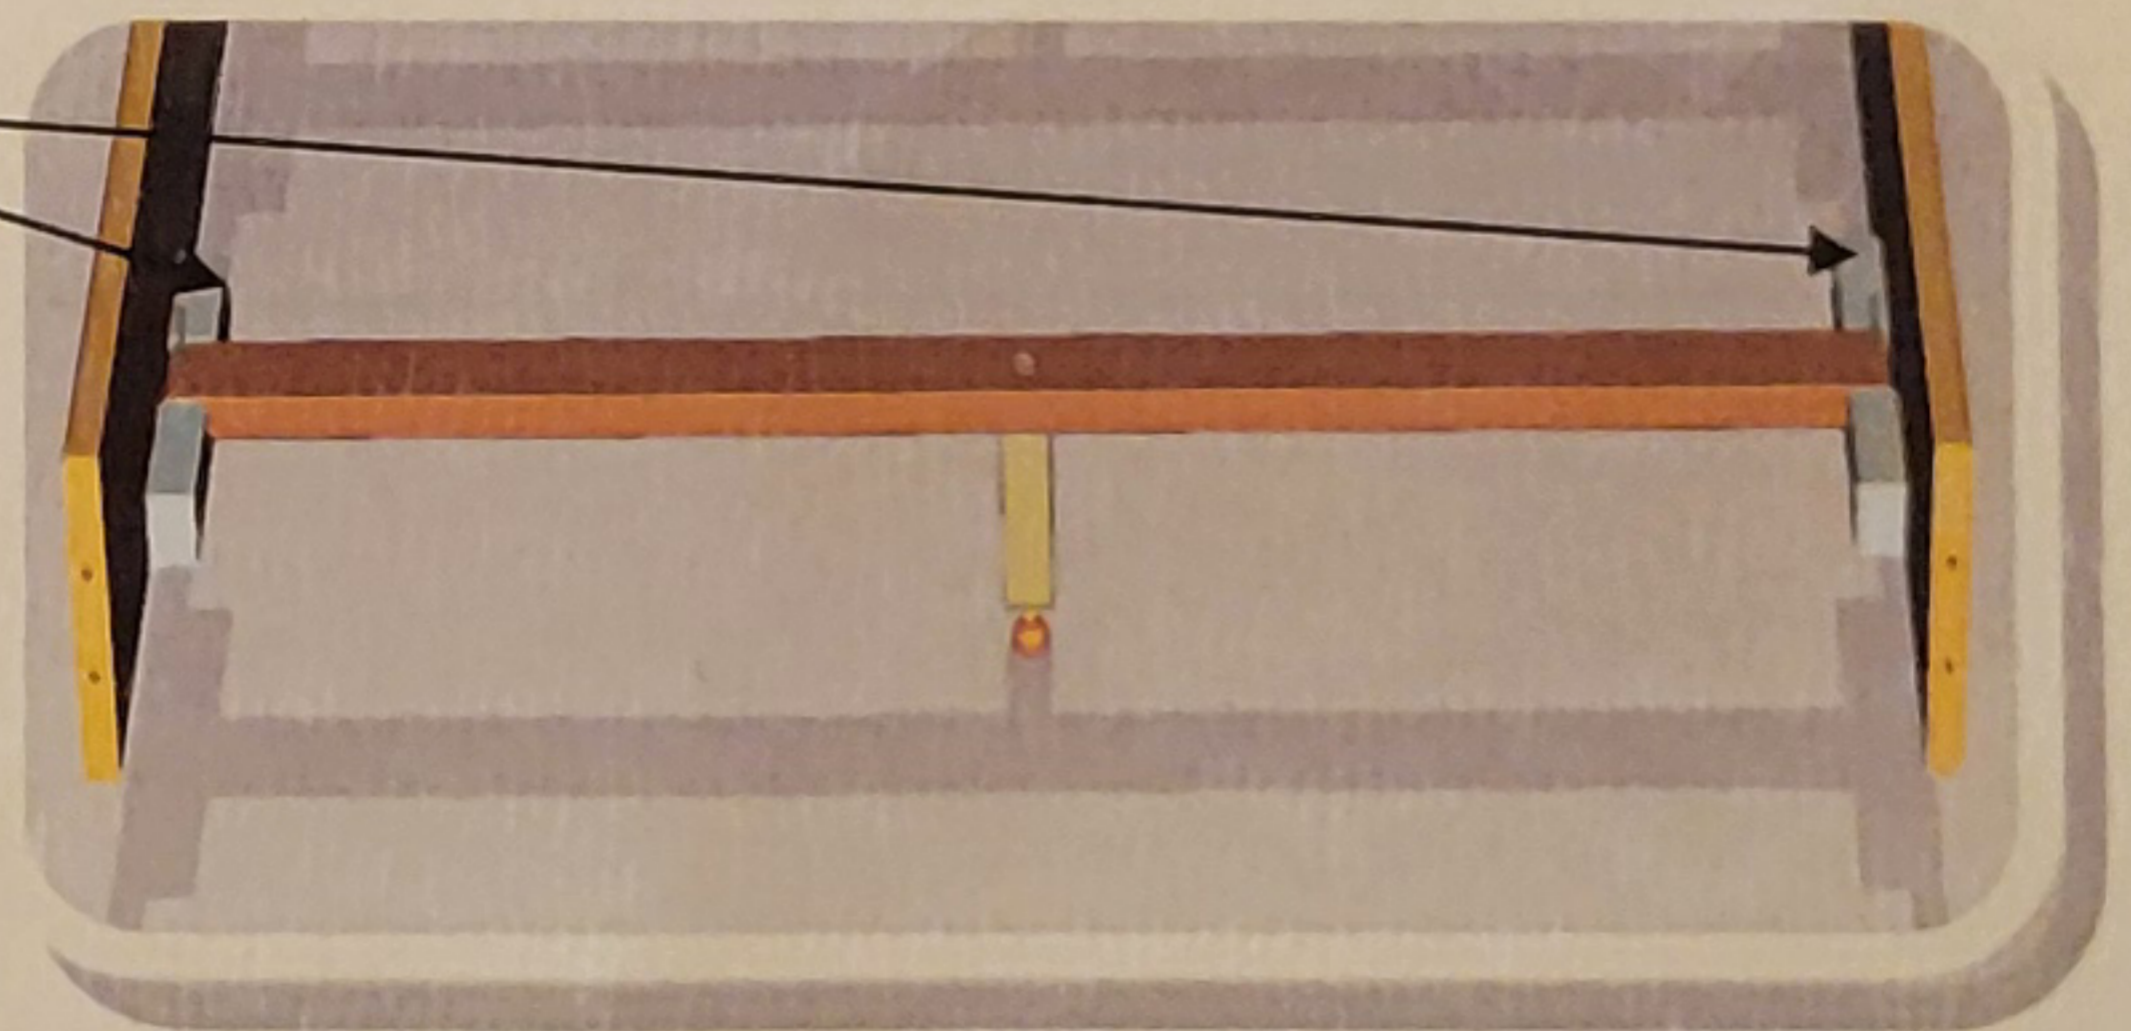

3-After the bed slats have been centered between the two bed rails, predrill the holes with a 1/8" drill on two ends of each bed slat then insert the screws provided to lock the bed slats in place.