

Component Parts

A Fixture

B Crossbar

C Threaded Stud (2)

D Barrel Nut (2)

E Cable

F Ground Screw

G #8 Screw

H Swivel

I Canopy

J 3" Fixture Pipe (1)

K 6" Fixture Pipe (1)

L 12" Fixture Pipe (3)

M Stem Nipple (4)

ASSEMBLY & INSTALLATION INSTRUCTIONS



Planar Small LED Pendant 139718

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJU-RY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products.

To Install Fixture (Figures 1)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

- 1. Carefully unpack the fixture from the carton. Do not remove plastic or bubble wrap around acrylic. These will keep it protected while installing fixture.
- Thread studs (C) through appropriate holes in crossbar (B) to match hole centers in canopy (I). Move ground screw
 (D) to another available threaded hole if necessary.
- 3. Using two machine screws (not provided), fasten the crossbar (C) to the electric box .

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

- 4. CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.
- 5. Locate fixture pipes (J,K,L), fixture (A), stem nipples (M) . Stem nipples (M) can be found in the kit bag.
- 6. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components and thread pipes and nipples together. Wires will slip easier through loose components than through pipes and nipples that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		Overall Height of Fixture															
		13.4	16.4	19.4	22.4	25.4	28.4	31.4	34.4	37.4	40.4	43.4	46.4	49.4	52.4	55.4	58.4
of Pip	3" Pipe (J)		1		1		1		1		1		1		1		1
	6" Pipe (K)			1	1			1	1			1	1			1	1
	12" Pipe (L)					1	1	1	1	2	2	2	2	3	3	3	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

- 7. Slip wires from the fixture (A) through assembled swivel (H) and canopy (I)
- 8. Attach cable (E) to crossbar (B) with #8 screw (G).
- 9. Refer to instructions on next page to continue installation.

ASSEMBLY & INSTALLATION INSTRUCTIONS



Planar Small LED Pendant 139718

10. The LED Driver OUTPUT wires are red and blue (or black) and are shipped with connectors attached. Lift one of the Empty orange lever in the connector up, to accept the wire. Verify the blue and red wires coming from the fixture are stripped (if not please strip them ¼ inch). Connect the red wires from the fixture to the red wires from the driver using this connector. Repeat the same for the blue wires. Blue to blue or blue to black.

WARNING: DO NOT CONNECT RED AND BLUE FIXTURE WIRES TO MAINS VOLTAGE, AS THIS CAN DAMAGE LEDS AND VOID WARRANTY COVERAGE.

11. Using suitable wire connectors (not provided) connect Driver INPUT wires to mains supply wires (white to white and black to black). Run a pigtail lead from crossbar ground screw (F) toward the junction box. Using suitable wire connector (not provided) connect fixture ground wire and pigtail lead to ground wire(s) from electrical box (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.

12. Slide fixture canopy (I) over threaded studs (C) and push firmly to ceiling, making sure that no wires are pinched between fixture canopy (I) and ceiling. Fasten with barrel nuts (D).

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN THE CANOPY AND THE CEILING.


13. Restore electricity at the main breaker.

Tips for Cleaning Acrylic:

- DO NOT use products that contain ammonia, alcohol, or abrasives such as Windex and other commercial cleaners.
- DO NOT use coarse sponges or pads.

RECOMMENDED:

Use a soft cotton cloth with warm water or a polish dedicated especially for acrylic.

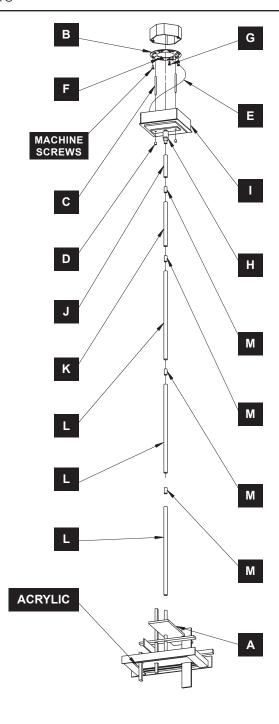

(Figure 1)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

